

Technical perfection and top design

kranzle®
HOCHDRUCKREINIGER

Operating manual

High-pressure cleaner

B 10/200
B 13/150
B 16/220
B 16/250



Read and conform safety instructions prior
to putting into operation !

- GB -



www.kranzle.com

Description

Dear Customer

We would like to congratulate you on your new portable/mobile high pressure cleaner and to thank you for the purchase.

To ease your introduction to the use of the cleaner, we have provided the following pages of explanations, tips and hints.


The equipment will assist you professionally in all cleaning tasks, e.g.:

- | | | |
|---------------------|--------------------------------|---------------------------------|
| - facades | - vehicles of all types | - barrels and containers |
| - flagstones | - sheds | - machines |
| - terraces | - channels | - streets |

| technical specifications | B 10/200 | B 13/150 | B 16/220 | B 16/250 |
|---|----------------------------|----------------------------|----------------------------|----------------------------|
| operating pressure, steplessly adjustable | 10 - 200 bar 220 bar | 10 - 150 bar 165 bar | 10 - 220 bar 240 bar | 10 - 250 bar 270 bar |
| permissible overpressure | | | | |
| water output | bei 1800 U/min 10 l/min | bei 1800 U/min 13 l/min | bei 1800 U/min 16 l/min | bei 1800 U/min 16 l/min |
| hot water input up to | 70 °C | 70 °C | 70 °C | 70 °C |
| suction height | 1,0 m | 2,5 m | 2,5 m | 2,5 m |
| high pressure hose with hose drum | 10 m - | 10 m 15 m | 10 m 15 m | 10 m 15 m |
| engine | Honda GX 200 LX | Honda GX 160 CX | Honda GX 340 CX | Honda GX 390 CX |
| weight | 22 kg | 24 kg | 26 kg | 26 kg |
| Guaranteed sound level L _{WA} | 103 dB (A) | 103 dB (A) | 103 dB (A) | 103 dB (A) |
| Vibrations at lance | ca. 32 N | ca. 27 N | ca. 38 N | ca. 38 N |
| recoil at lance | 2,0 m/s ² | 2,1 m/s ² | 2,2 m/s ² | 2,2 m/s ² |
| order No. | | | | |
| portable | 41.182 | 41.170 | | |
| with undercarriage | 41.182 1 | 41.170 1 | 41.173 2 | 41.186 |
| with undercarriage and hose drum | | 41.170 2 | 41.173 3* | |
| with speed control * | | | 41.173 | |

Permissible tolerance for figures ± 5 % in accordance with VDMA uniform sheet 24411

Description

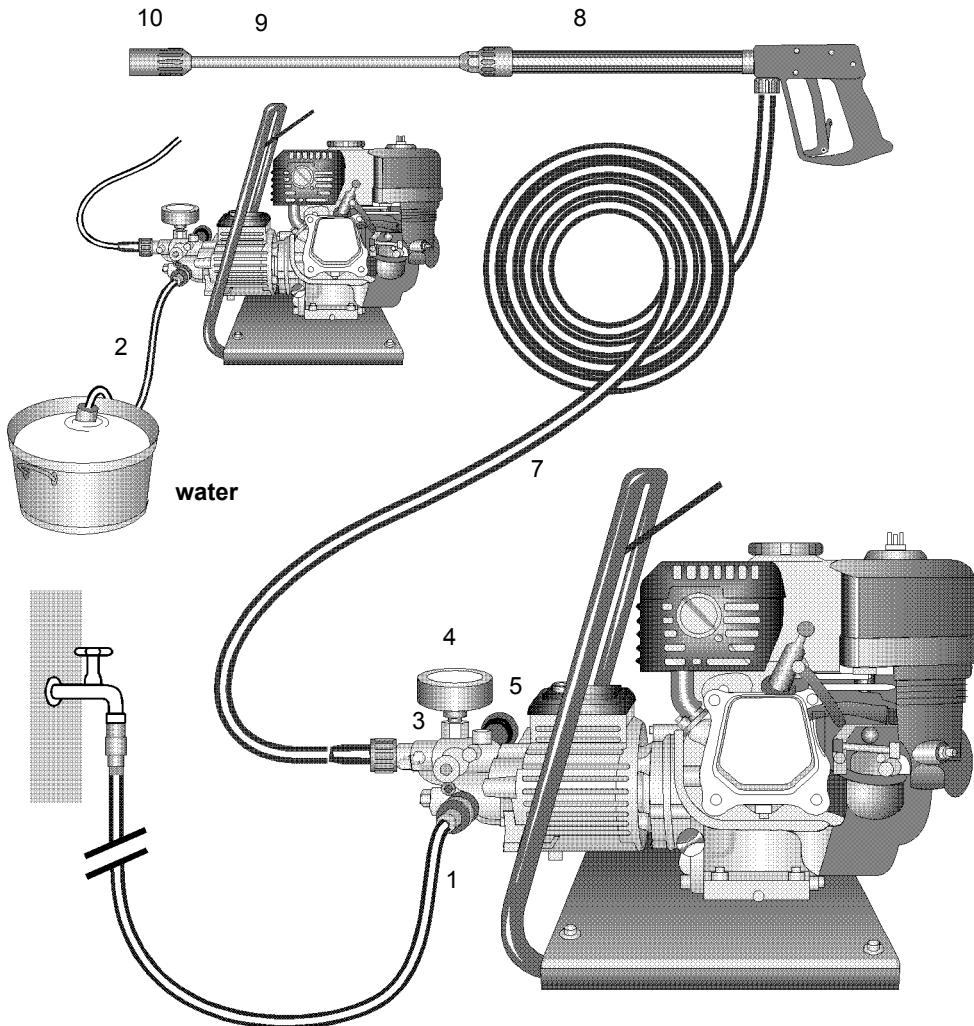

Construction

The KRÄNZLE B 10/200 + B 13/150 + B 16/220 - 16/250- high pressure cleaners are portable/mobile machines. The design can be seen from the diagram.

Item

- | | |
|--|-----------------------------------|
| 1 Water inlet connection with filter | 7 High pressure hose |
| 2 Suction hose with filter (special accessory) order No. 15.038 | 8 Spray gun assembly |
| 3 High pressure pump | 9 Interchangeable lance |
| 4 Pressure gauge with glycerin filling | 10 Regulator nozzle |
| 5 Unloader valve - safety valve | 10a B10/200 only with dirt-killer |

Description

Water - and Cleang - Care System

Water can be connected at mains pressure to the high pressure pump or it can be sucked directly from a storage tank.

The water is then forced under pressure by the high pressure pump to the lance. The high pressure jet is formed by the nozzle at the end of the lance.

Cleaning and caring agents can be mixed with the water by a low pressure injector. (not with B10/200)



Environmental, refuse disposal and water protection regulations must be observed !

Lance with trigger gun

The machine can only be operated when the safety trigger is squeezed.

When the lever ist squeezed, the spray gun opens. The liquid is then pumped to the nozzle. The spray pressure increases and quickly reaches the selected operating pressure.

When the trigger ist released, the trigger gun closes and any further spraying of liquid from the lance ist stopped.

The increase in pressure when the trigger gun is closed causes the unloader valve-safety valve to open. The pump remaines switched on and continues to pump liquid through the pump at reeducated pressure.

When the trigger gun ist opened, the unloader valve - safety valve closes and the pump ressumes pressure spraying from the lance.



The trigger gun is a safety device. Repairs should only be performed by qualified persons. Should replacement parts be required, use only components authorized by the manufacturer.

Unloader valve - safety valve


The unloader valve - safety valve protects the machine from a build-up of excess pressure, and is designed not to permit an excess pressure to be selected for operating. The limit nut on the handle is sealed with a spray coating.

The operating pressure and spray rate can be steplessly adjusted by tuning the handle.



Replacements, repairs, new adjustments and sealing should only be performed by qualified persons.

Description

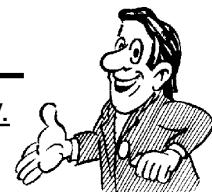

For the motor follow the Honda operating manual only.

Motor-safety:

(see Honda operating manual)

Honda motors are safe and reliable if they are operated correctly. Read the operating manual carefully before using the motor and try to understand the contents of the manual completely.

Not following this advice could lead to injuries or damage of the equipment.

 To avoid a possible fire hazard and to ensure the necessary ventilation the motor has to be operated at a distance of at least 1 m from buildings and objects. Inflammable objects have to be kept away from the surrounding area of the motor.

Children and pets have to be kept away from the motor, as there is a danger of suffering burns from hot motor parts and to be injured by equipment driven by the motor.

Get to know the motor and especially learn how to switch it off quickly. Do not allow persons to operate the motor who are not familiar with it.

Setting up: Location



Neither set up and operate the machine in rooms where there is a risk of fire or explosion nor put it into puddles. Do not use the machine under water.

CAUTION !



Never use liquid containing solvents such as paint thinners, petrol, oil or similar liquid matter. Pay attention to the instructions of the manufacturers of the cleaning agents. The seals in the machine are not resistant to solvents. The spray of solvents is inflammable, explosive and poisonous.

CAUTION !



When running your high pressure cleaner with hot water of 70° C raised temperatures occur.
Do not touch the machine without safety gloves.

Description



Brief operating instructions

1. Connect the high pressure hose with spray gun and machine.
2. Connect the suitable water supply.
3. Flush the air from the pump (open and close the spray gun several times).
4. Switch on the motor while the spray gun is open and commence cleaning.
5. After completing the work, completely empty the pump (switch the motor on for approximately 20 seconds without the suction and pressure hose).
Afterwards you can roll up the high pressure hose.
- Only use clean water ! Protect from frost !

CAUTION !

Please pay attention to the regulations of your waterworks company.

In accordance with DIN 1988, the machine may not be directly connected to the public drinking water supply lines.

A brief connection however is permissible according to DVGW (German Association for Gas and Water Affairs) if a tube ventilator with check valve (KRÄNZLE Order-No. 41.016 4) is built into the water supply.

Also indirect connection to the public drinking water supply lines is permissible by way of free emission in accordance with DIN 1988, part 4; e.g. by using a reservoir with a float valve.

Direct connection to a non-drinking water supply line is permissible.

High pressure hose and spray device

The high pressure hose and spray device supplied with the machine are made of high grade material, they are also optimized for the machine and marked as required by the appropriate regulations.



If replacement parts are required, only such parts that are authorized by the manufacturer and which bear the markings required by the appropriate regulations may be used. The high pressure hose and spray device must be connected in a pressure-tight manner. The high pressure hose may not be driven over, pulled excessively, or twisted. The hose may under no circumstances be pulled over sharp edges, since otherwise the guarantee is automatically void.



Safety notes



As to the recoil -
see notice on page 2.

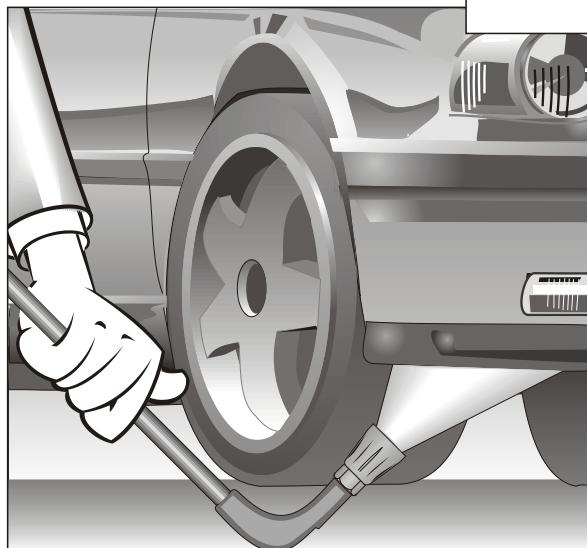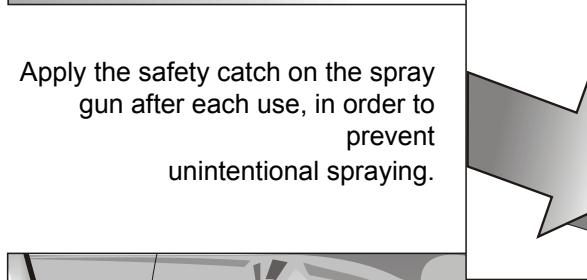

Always aim the underbody lance. Note when using an angle underbody lance, like for example lance No. 41.075, that there is a certain amount of torque (twisting motion) in the recoil. (See also notice on page 2).

This is what you've purchased :




1. Spray lance with regulator and high pressure nozzle, flat spray (B10/200 only with dirt-killer, vario-jet)




2. Spray gun with insulated pistol grip and screw connection




3. KRÄNZLE - High pressure cleaner
B 10/200 B 13/150 B 16/220

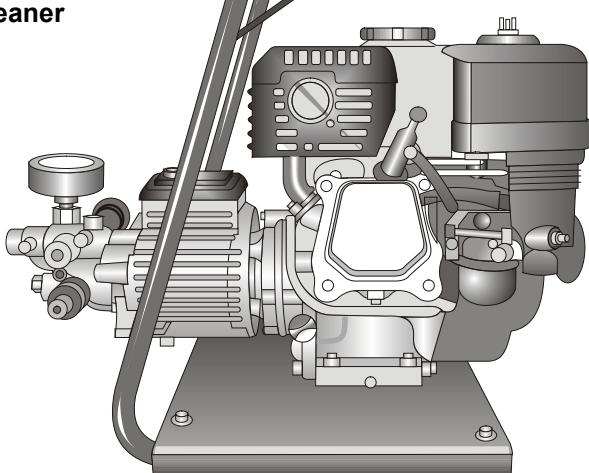

4. High pressure hose 10 m
15 m HP-hose for cleaners with hose drum

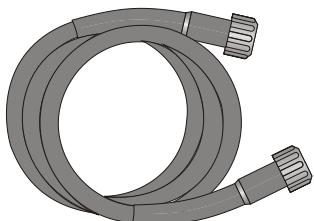

5. Operating instructions pump
Operating instructions motor


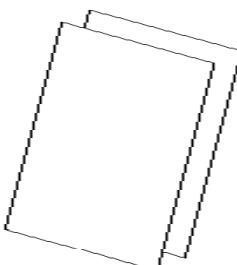


6. Water inlet components




Prepare for use



1. Oil-measuring

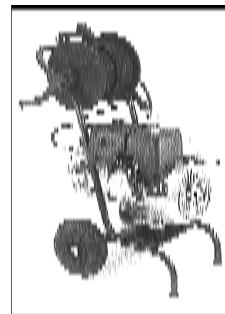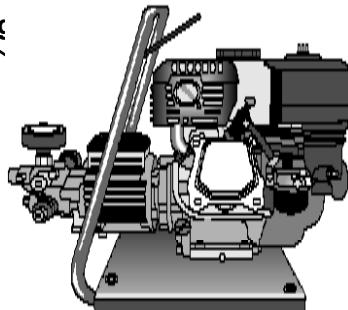


2. Connect the high pressure lance to the spray gun

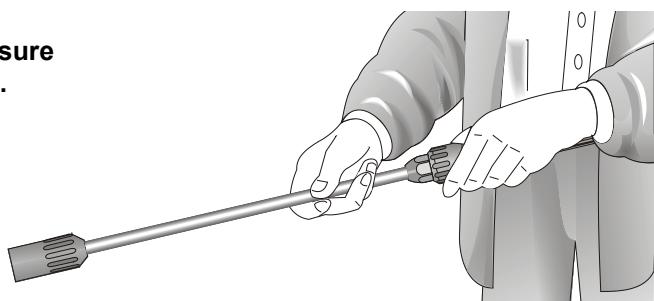

3. Unwind the high pressure hose without leaving kinks or „nooses“ and connect it to the spray gun and pump. When using extension hoses, use max. 20 m high pressure hose, or 2 x 10 m with hose connectors.

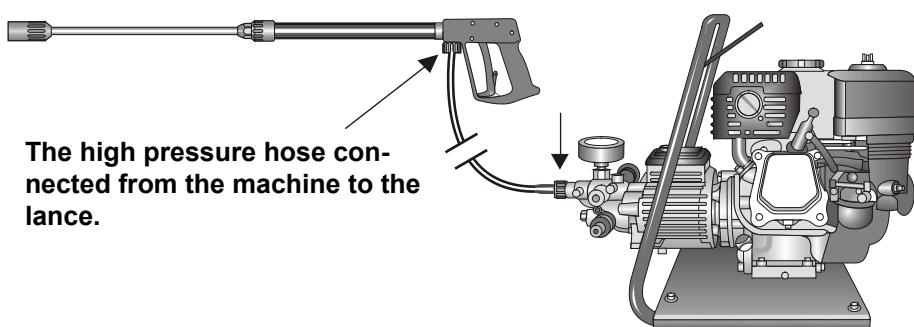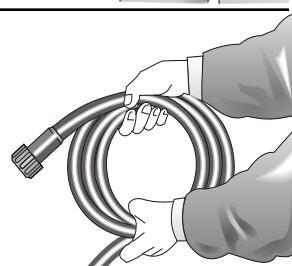

Preparation for use

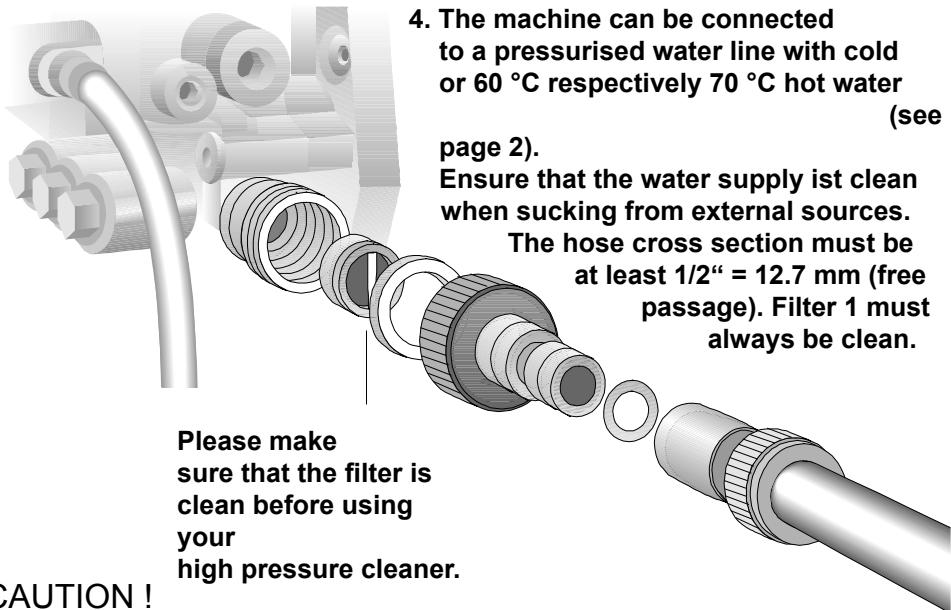

4. The machine can be connected to a pressurised water line with cold or 60 °C respectively 70 °C hot water (see page 2).

Ensure that the water supply is clean when sucking from external sources.

The hose cross section must be at least 1/2" = 12.7 mm (free passage). Filter 1 must always be clean.

Please make sure that the filter is clean before using your high pressure cleaner.

CAUTION!



When running your high pressure cleaner with hot water of 70° C raised temperatures occur.

Do not touch the machine without safety gloves.

5. Maximum induction height 2.5 m
- see technical data on page 2.



Preparation for use

Adjusting the pressure


This is accomplished by turning the handwheel.
The default setting is maximum pressure.




To shut down the pump:

1. Switch off the machine
2. Cut off the water supply
3. Open the spray gun briefly until the pressure is released
4. Apply the safety catch on the spray gun
5. Remove the water hose and high pressure hose
6. Drain the pump: switch on the motor for approx. 20 seconds
7. Winter: store the pump in rooms above 0° C
8. Clean the water filter

This is prohibited


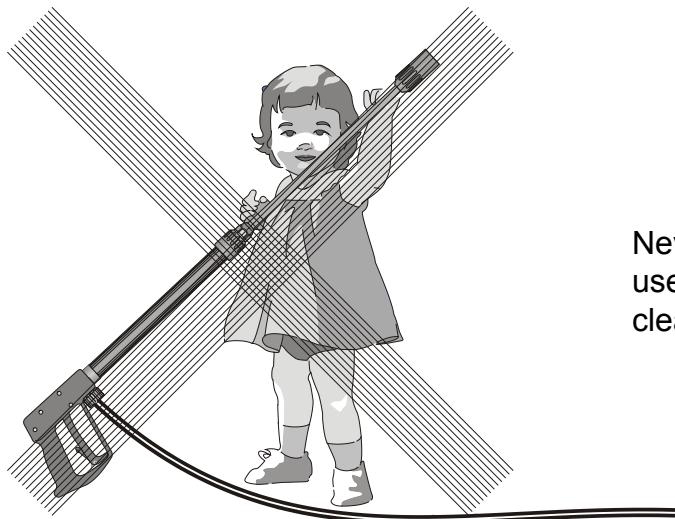


Never allow children to use the high pressure cleaner !

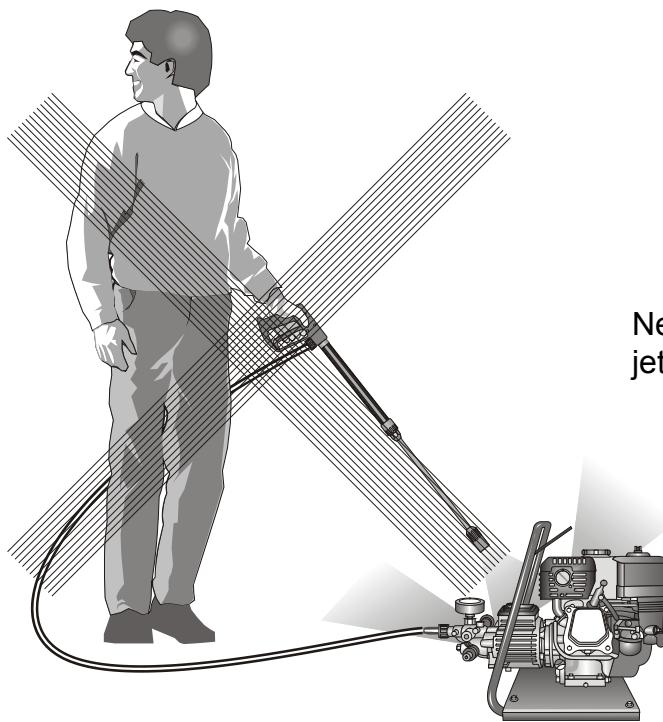


Never direct the water jet at the machine itself !

This is prohibited

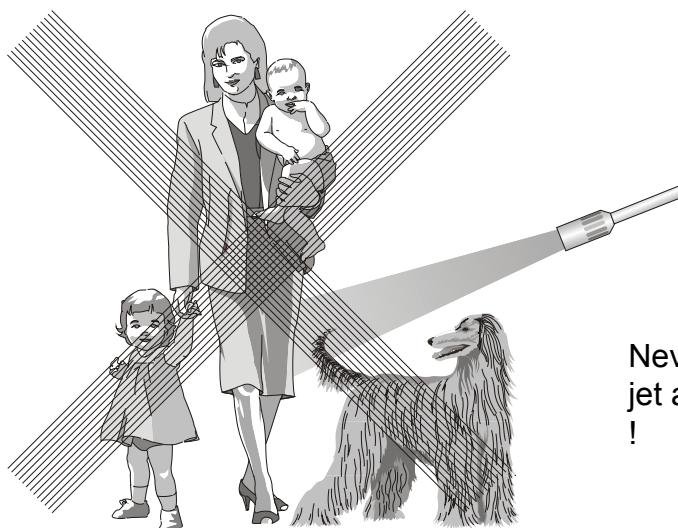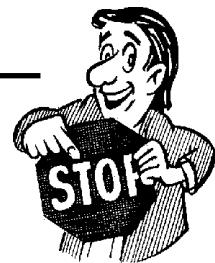


Never direct the water jet at people or animals !

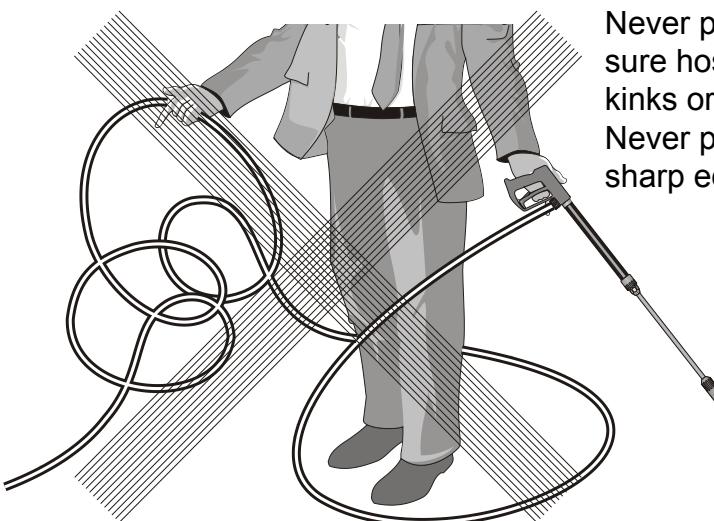


Never pull the high pressure hose if it has formed kinks or „nooses“!
Never pull the hose over sharp edges !

Additional KRÄNZLE accessories


(not with B 10/200)

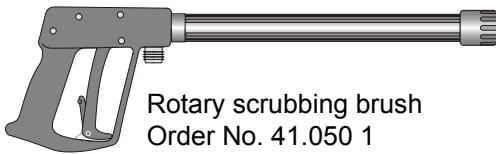


Rotary scrubbing brush
Order No. 41.050 1

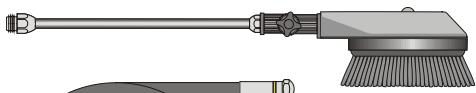


Drain and pipe
cleaning hose
8 m - Order No. 41.051
15 m - Order No. 41.058

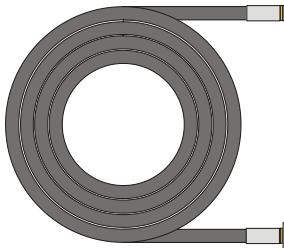


Underbody lance, new
Order No. 41.075

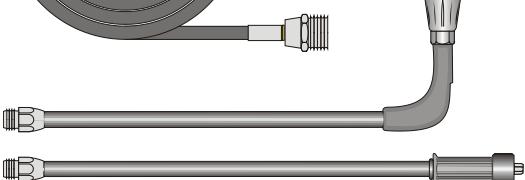

Sandblaster
Order No. 41.068 1

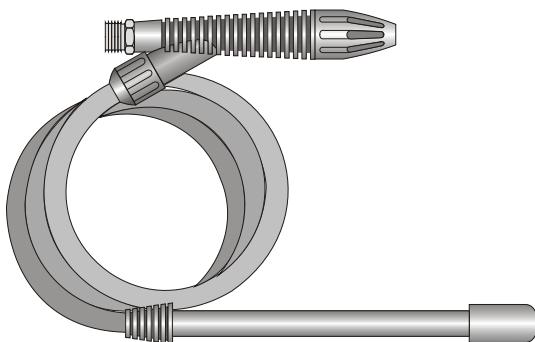

Flat brush
Order No. 41.073

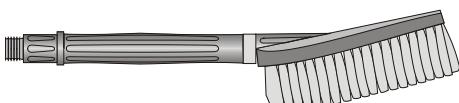

Schmutzkiller
B 10/200



Best.-Nr. 41.073 8

B13/150

Best.-Nr. 41.072 5

Turbokiller



B 16/220

Best.-Nr. 41.072 4



B16/250

Best.-Nr. 41.072 3




Environmental, refuse disposal and water protection regulations must be observed when using the accessories.


for further combination possibilities

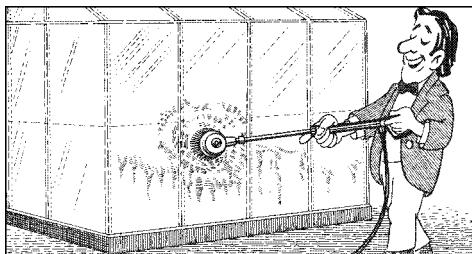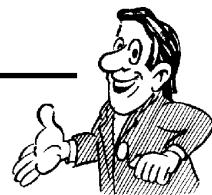


Car cleaning, glass, caravan, boat etc.: rotary washing brush with 40 cm extension and ST 30 nipple M 22

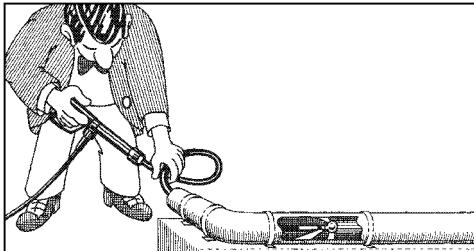

Cleaning pipes, channels and drains: Pipe cleaning hose with KN nozzle and ST 30 nipple M 22.

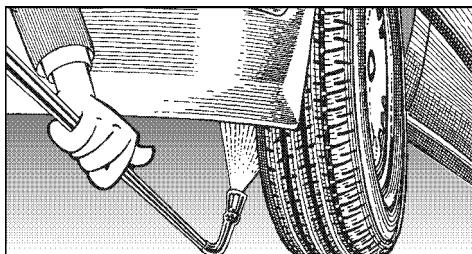


Underbody cleaning of cars, trailers and equipment: lance 90 cm with high pressure nozzle and ST 30 nipple. The lance must be aimed when spraying.

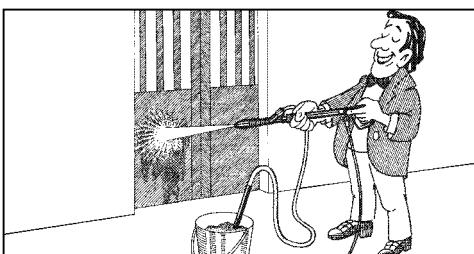


Blasting old paint, rust and facades: sandblasting injector with suction lance and 3 m PVC hose and ST 30 nipple M 22.

When sandblasting you must wear protection clothes! Pay attention to the instructions of the manufacturer of the abrasive.

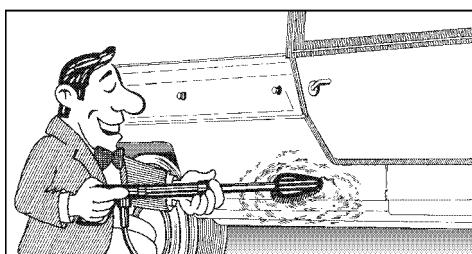

Cleaning cars and all smooth surfaces: brush with ST 30 nipple M 22.

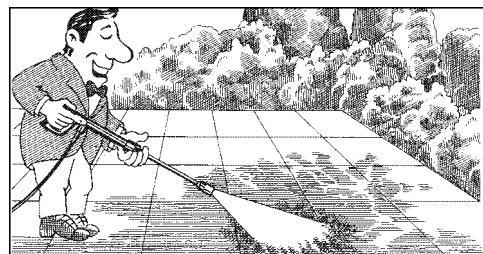

Rotary point sprayer for extreme soiling: dirt killer with 40 cm extension and ST 30 nipple M 22.

Small repairs –

You only get a weak flow of water or no water at all !



- The pressure gauge shows a 10% higher pressure than the working pressure.



Do it yourself !

The nozzle is blocked !


- No water but the gauge shows full pressure.

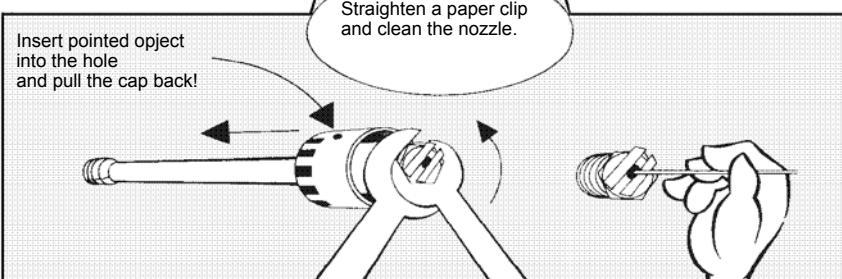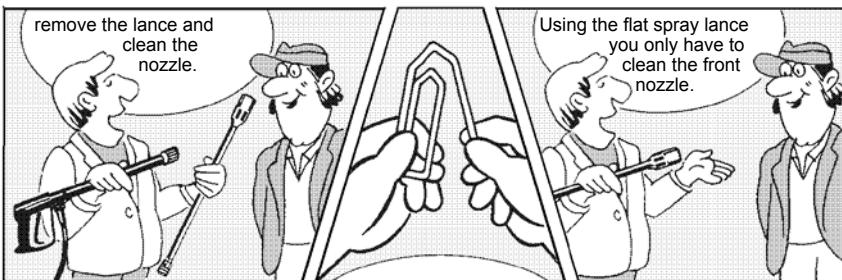

Small repairs - Do it yourself !

Valve dirty or sticky !

- Pressure gauge does not show full pressure.
- Water comes out in spurts.
- If you do not use the high pressure cleaner for some time the valves can stick.

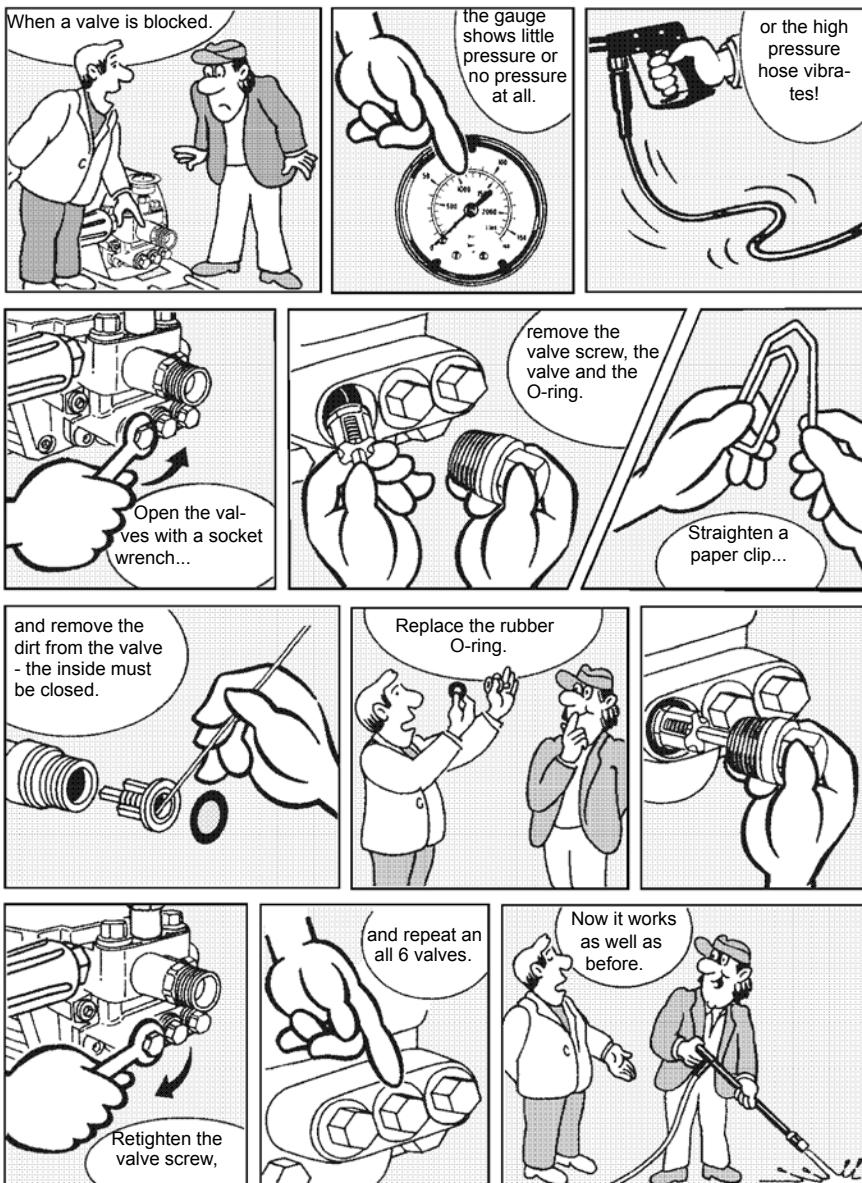

General rules

Inspections:

The machine must be inspected according to the „Guidelines for Liquid Spray Devices“ at least once every 12 months by a qualified person, to ensure that continued safe operation is guaranteed. The results of the inspection are to be recorded in writing. This may be done in any form.

Accident prevention

The machine is designed for accidents to be impossible if used correctly. The operator is to be notified of the risk of injury from hot machine parts and the high pressure water jet. The „Guidelines for Liquid Spray Devices“ must be complied with. (see page 12 and 13)

Check the oil level with the oil-measuring stick prior to each use.
(Ensure horizontal position!)

Oil change B10/200 ; B13/150:

No oil change is required during the working life of the machine. However, should it be necessary to change the oil in the event of repairwork, the oil sight glass is to be opened over a reservoir and the machine to be emptied. The oil is to be caught in the reservoir and disposed of in the approved manner.


New oil: 0,3 l - Motor oil W 15/40

Oil change B16/220;B 16/250

The oil of your high pressure pump should be changed after approx. 40 hours of operation, or no later than when it takes an a grey or whitish colour. Open the oilplug over a container and drain off all the oil. The oil must be caught in a contianer and disposed of in a responsible, legal manner.

New oil: 1,0 l - Castrol Formula RS

Complete Assembly

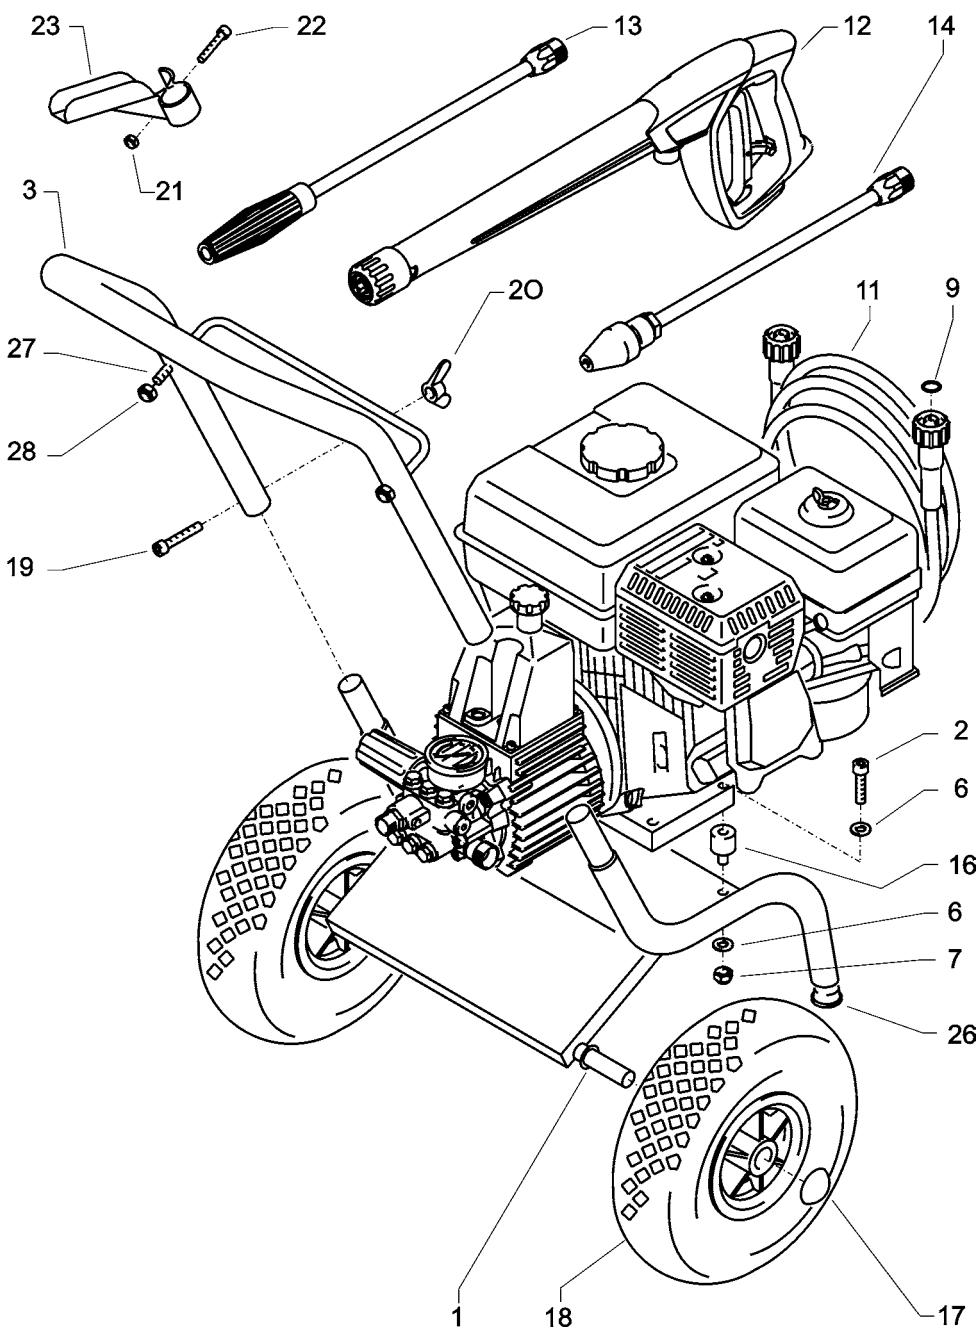


KRÄNZLE B 10/200

Spare parts list Profi-Jet B 10/200 with undercarriage Complete Assembly

| No. | Description | Qty. | Ord.-No. |
|------------------------------|---|------|-----------------|
| 1 | Wagen | 1 | 41.101 7 |
| 1a | Wagen kompl. (Pos. 1 + 3) | 1 | 41.101 5 |
| 2 | Sechskantschraube M 8 x 25 | 2 | 44.137 |
| 2.1 | Sechskantschraube M 8 x 30 | 2 | 44.033 2 |
| 3 | Schubbügel | 1 | 41.101 6 |
| 6 | Unterlegscheibe 8,4 DIN125 | 8 | 41.515 |
| 7 | Elastic-Stop-Mutter M 8 | 4 | 41.410 |
| 9 | O-Ring 9,3 x 2,4 | 2 | 13.273 |
| 11 | Hochdruckschlauch 10 m / DN 8 - 210 bar | 1 | 41.081 |
| 12 | Pistole M2000 | 1 | 12.480 |
| 13 | Lanze mit Vario-Jet 03 | 1 | 41.156 8-03 |
| 14 | Lanze mit Schmutzkiller 03 | 1 | 41.570-03 |
| 16 | Gummidämpfer | 4 | 40.220 |
| 17 | Starlock-Kappe | 2 | 40.142 |
| 18 | Rad luftbereift | 2 | 40.141 |
| 19 | Sechskantschraube M 6 x 40 | 2 | 40.133 |
| 20 | Flügelmutter M 6 | 2 | 40.132 |
| 21 | Mutter M 6 | 1 | 14.127 1 |
| 22 | Innensechskantschraube M 6 x 35 | 1 | 40.131 |
| 23 | Pistolenhalterung | 1 | 40.130 |
| 26 | Gummistopfen für Wagen | 2 | 40.208 1 |
| 27 | Bügel | 1 | 41.101 6 |
| 28 | Elastic-Stop-Mutter M 8 | 2 | 41.410 |
| Motor Honda GX 200 LX | | | 24.027 2 |

Transmission unit

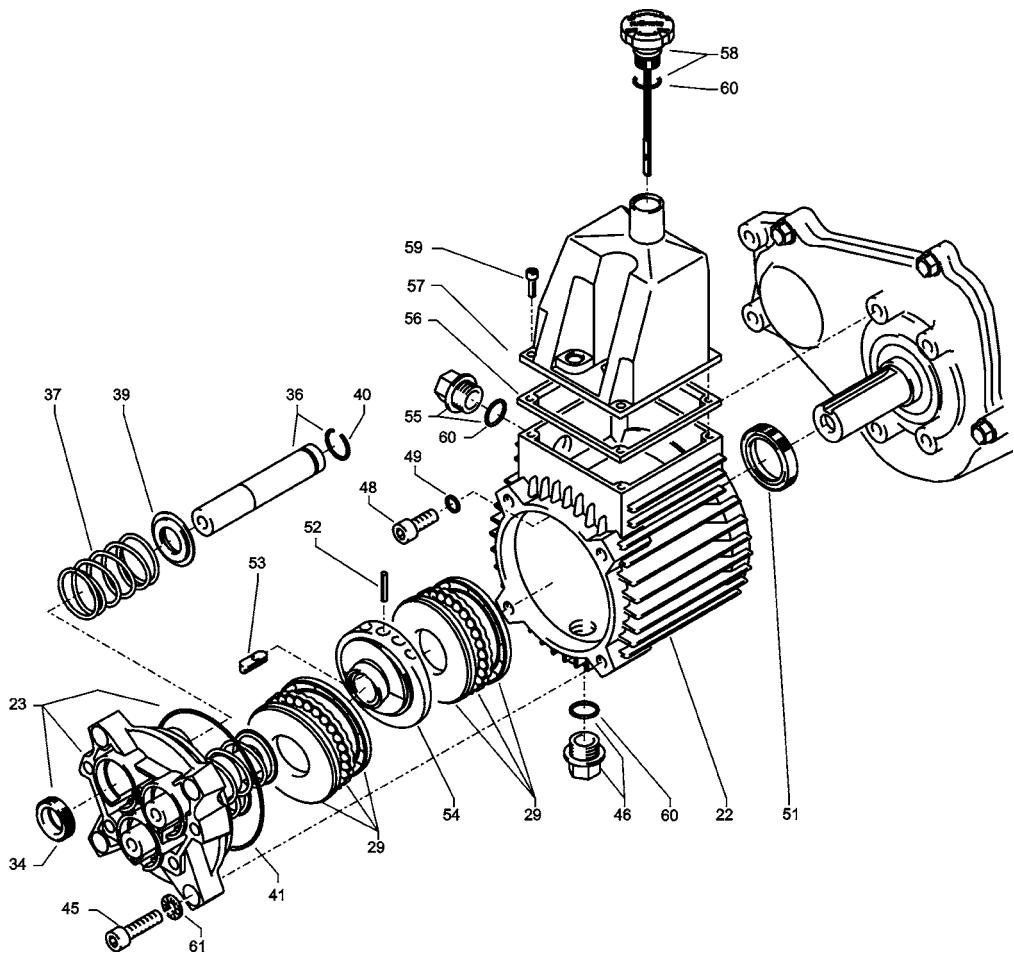


Kräntzle B 10/200

Spare parts list Profi-Jet B 10/200 Transmission unit

| No. | Description | Qty. | Ord.-No. |
|------|------------------------------------|------|---------------|
| 22 | Getriebegehäuse | 1 | 41.481 1 |
| 23 | Gehäuseplatte 15 mm | 1 | 42.906 |
| 29 | Axial-Rillenkugellager 3-teilig | 2 | 43.486 |
| 34 | Öldichtung 15 x 24 x 7 | 3 | 42.907 |
| 36 | Plunger 15 mm | 3 | 42.908 |
| 37 | Plungerfeder | 3 | 41.033 |
| 39 | Federdruckscheibe 15 mm | 3 | 42.909 |
| 40 | Sprengring 15 mm | 3 | 42.910 |
| 41 | O-Ring Viton 88 x 2 | 1 | 41.021 1 |
| 45.1 | Innensechskantschraube M 8 x 30 | 4 | 41.036 1 |
| 46 | Ölablassstopfen M18x1,5 mit Magnet | 1 | 48.020 |
| 48 | Innensechskantschraube M 8 x 20 | 4 | 41.480 |
| 49 | Kupferdichtring | 4 | 41.500 |
| 51.1 | Wellendichtring 25 x 35 x 5 | 1 | 41.019 5 |
| 52 | Spannstift 3 x 16 | 1 | 14.148 1 |
| 53 | Stufenkeil | 1 | 41.183 |
| 54 | Taumelscheibe 13° | 1 | 41.028 6-13,0 |
| 55 | Verschlussstopfen M 18 x 1,5 | 1 | 41.011 |
| 56 | Flachdichtung | 1 | 41.019 3 |
| 57 | Deckel | 1 | 40.518 |
| 58 | Ölmessstab | 1 | 42.520 2 |
| 59 | Innensechskantschraube M 5 x 12 | 4 | 41.019 4 |
| 60 | O-Ring 14 x 2 | 3 | 43.445 |
| 61 | Sicherungsring | 4 | 40.054 |
| 31 | Leckagering 15 mm | 3 | 42.905 |

Valve housing

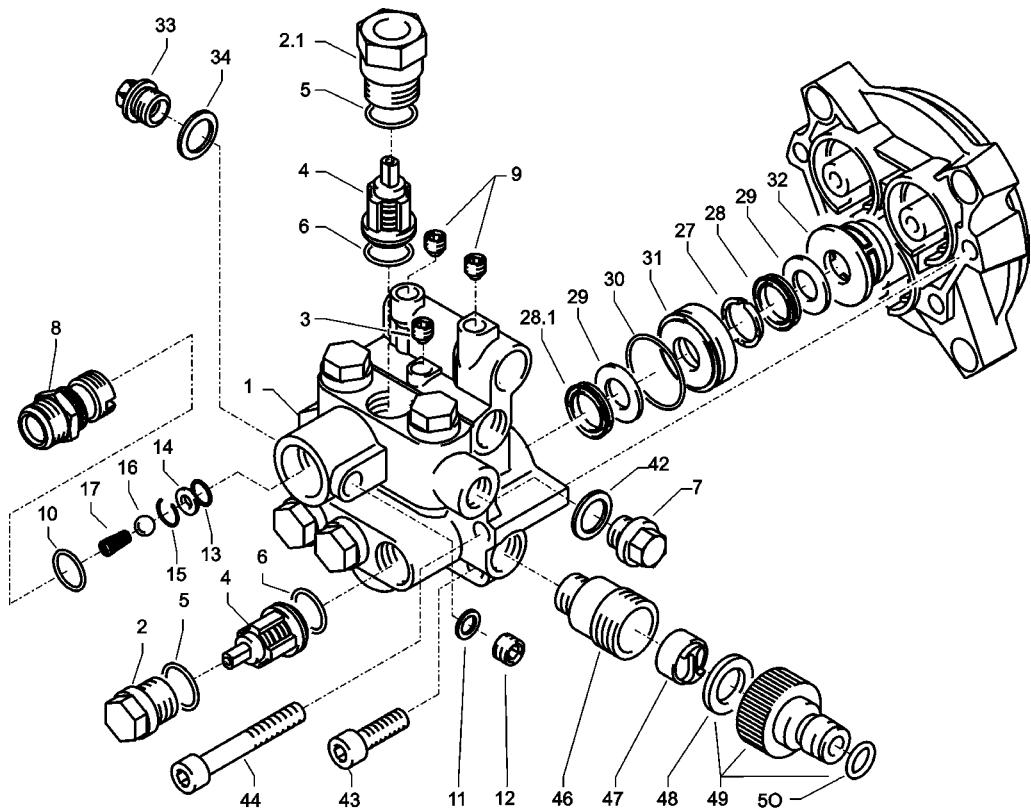


Kräntzle B 10/200

Spare parts list Profi-Jet B 10 / 200 Valve housing APG 15 mm

| No. | Description | Qty. | Ord.-No. |
|------|--|------|----------|
| 1 | Ventilgehäuse | 1 | 42.163 3 |
| 2 | Ventilstopfen | 5 | 41.714 |
| 2.1 | Ventilstopfen mit R1/4“ IG | 1 | 42.026 1 |
| 3 | Dichtstopfen M 10 x 1 | 1 | 43.043 |
| 4 | Ventile (grün) für APG-Pumpe | 6 | 41.715 1 |
| 5 | O-Ring 16 x 2 | 8 | 13.150 |
| 6 | O-Ring 15 x 2 | 6 | 41.716 |
| 7 | Dichtstopfen R 1/4“ mit Bund | 1 | 42.103 |
| 8 | Ausgangsteil M22x1,5 | 1 | 40.522 1 |
| 9 | Dichtstopfen M 8 x 1 | 2 | 13.158 |
| 10 | O-Ring 18 x 2 | 1 | 43.446 |
| 11 | Aluminium - Dichtring | 3 | 13.275 |
| 12 | Stopfen 1/4“ AG mit ISK | 1 | 13.387 |
| 13 | O-Ring 11 x 1,5 | 1 | 12.256 |
| 14 | Edelstahlsitz Ø 7 | 1 | 14.118 |
| 15 | Sprengring | 1 | 12.258 |
| 16 | Edelstahlkugel Ø10 | 1 | 12.122 |
| 17 | Rückschlagfeder „K“ | 1 | 14.120 1 |
| 27 | Stützring rot 15mm | 3 | 42.913 |
| 28 | Manschette weich 15mm | 3 | 42.902 |
| 28.1 | Manschette Gewebe 15mm | 3 | 42.902 1 |
| 29 | Backring 15 x 24 | 6 | 42.903 |
| 30 | O-Ring 28,3 x 1,78 | 3 | 40.026 |
| 31 | Leckagering 15 mm | 3 | 42.905 |
| 32 | Zwischenring 15 mm | 3 | 42.904 1 |
| 33 | Verschlussstopfen R3/8“ | 1 | 14.113 |
| 34 | Kupferring 17 x 22 x 1,5 | 1 | 40.019 |
| 42 | Usit-Ring | 1 | 42.104 |
| 43 | Innensechskantschraube M 8 x 30 | 2 | 41.036 1 |
| 44 | Innensechskantschraube M 8 x 55 | 2 | 41.017 1 |
| 46 | Sauganschluss | 1 | 41.016 |
| 47 | Wasserfilter | 1 | 41.046 1 |
| 48 | Gummidichtung | 1 | 41.047 1 |
| 49 | Steckkupplung | 1 | 41.047 2 |
| 50 | O-Ring | 1 | 41.047 3 |
| | Repair kit Valves for APG-Pump consisting of 6x No. 4; 6x No. 5; 6x No. 6 | | 41.748 1 |
| | Repair kit sleeves 15 mm consisting of 3x No. 24; 3x No. 27; 3x No. 28; 6x No. 29; 6x No. 30 | | 42.911 |
| | Valve housing compl. with integr. ULH and pressure switch | | 42.912 |

Unloader

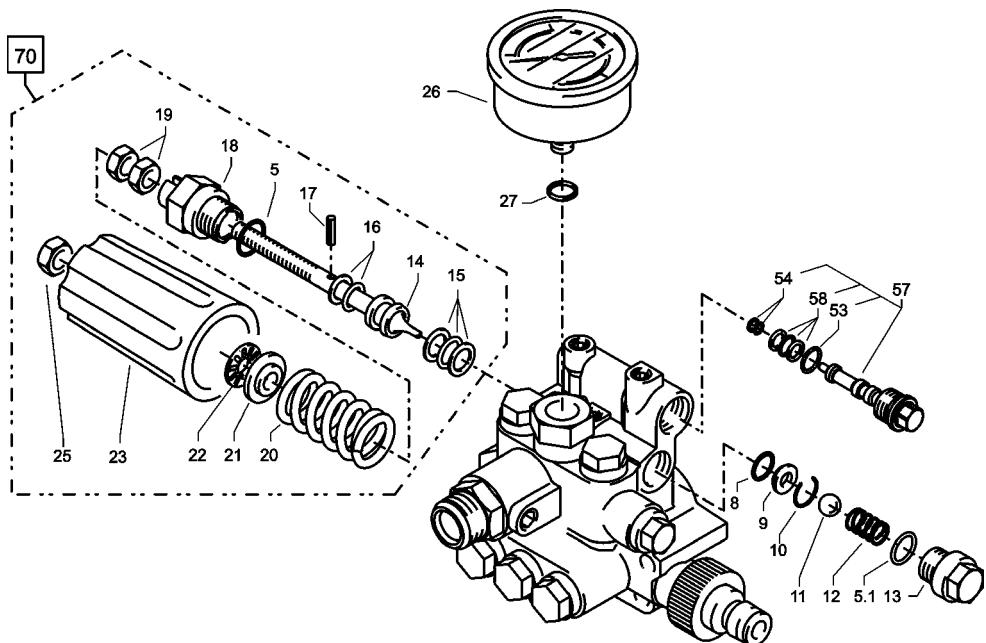


Kräntzle B 10/200

Spare parts list Profi-Jet B 10 / 200 Unloader

| No. | Description | Qty. | Ord.-No. |
|-----------|---|------|---------------|
| 5 | O-Ring 16 x 2 | 1 | 13.150 |
| 5.1 | O-Ring 13,94 x 2,62 | 1 | 42.167 |
| 8 | O-Ring 11 x 1,44 | 1 | 12.256 |
| 9 | Edelstahlsitz | 1 | 14.118 |
| 10 | Sicherungsring | 1 | 13.147 |
| 11 | Edelstahlkugel | 1 | 13.148 |
| 12 | Edelstahlfeder | 1 | 14.119 |
| 13 | Verschlusssschraube | 1 | 14.113 |
| 14 | Steuerkolben | 1 | 14.134 |
| 15 | Parbaks 16 mm | 1 | 13.159 |
| 16 | Parbaks 8 mm | 1 | 14.123 |
| 17 | Spanstift | 1 | 14.148 |
| 18 | Kolbenführung spezial | 1 | 42.105 |
| 19 | Kontermutter M 8 x 1 | 2 | 14.144 |
| 20 | Ventilfeder schwarz | 1 | 14.125 |
| 21 | Federdruckscheibe | 1 | 14.126 |
| 22 | Nadellager | 1 | 14.146 |
| 23 | Handrad | 1 | 14.147 |
| 25 | Elastic-Stop-Mutter M 8 x 1 | 1 | 14.152 |
| 26 | Manometer 0-250 Bar | 1 | 15.039 |
| 27 | Aluminium-Dichtring | 2 | 13.275 |
| 50 | O-Ring 3,3 x 2,4 | 1 | 12.136 |
| 53 | O-Ring 14 x 2 | 1 | 43.445 |
| 54 | Parbaks 4mm | 1 | 12.136 2 |
| 57 | Blindverschluss mit Dichtungen | 1 | 44.551 |
| 58 | Parbaks 7mm | 1 | 15.013 |
| 70 | Piston valve compl. with Handwheel | | 43.444 |

Complete Assembly

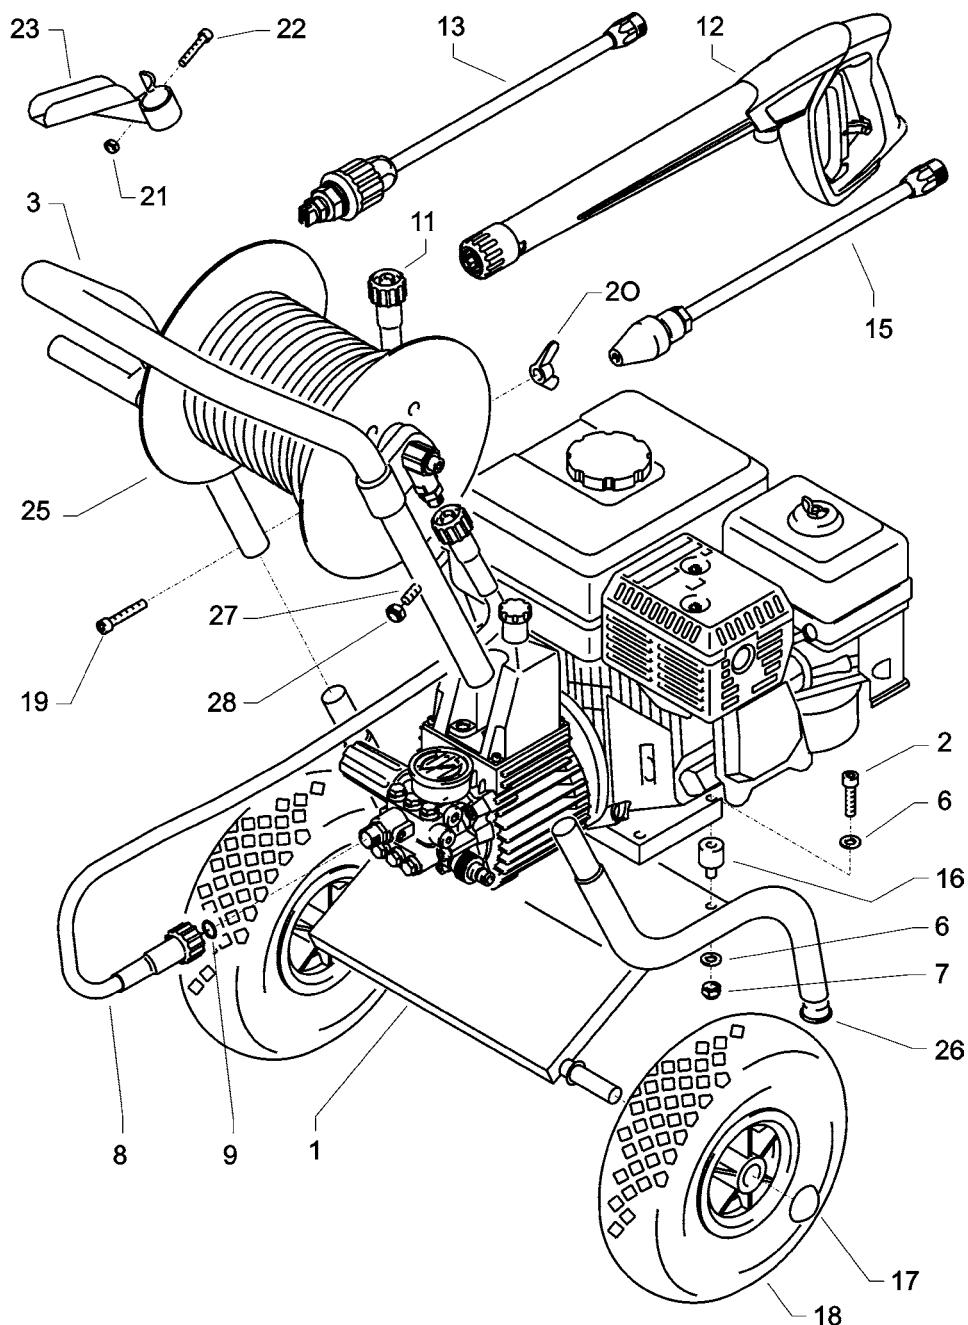


Kräntze B 13/150

Spare parts list Profi-Jet B 13/150 with undercarriage Complete Assembly

| No. | Description | Qty. | Ord.-No. |
|-------------------------------------|---|-----------------|--------------|
| 1 | Wagen | 1 | 41.101 7 |
| 1a | Wagen kompl. (Pos. 1 + 3) | 1 | 41.101 5 |
| 2 | Sechskantschraube M 8 x 25 | 2 | 44.137 |
| 2.1 | Sechskantschraube M 8 x 30 | 2 | 44.033 2 |
| 3 | Schubbügel | 1 | 41.101 6 |
| 6 | Unterlegscheibe 8,4 DIN125 | 8 | 41.515 |
| 7 | Elastic-Stop-Mutter M 8 | 4 | 41.410 |
| 8 | Hochdruckschlauch 1m / DN 8 - 210 bar | 1 | 41.265 |
| 9 | O-Ring 9,3 x 2,4 | 2 | 13.273 |
| 11a | bei Gerät mit Schlauchtrommel Hochdruckschlauch 20 m / DN 8 - 210 bar | 1 | 41.083 |
| 11b | bei Gerät ohne Schlauchtrommel Hochdruckschlauch 10 m / DN 6 - 210 bar | 1 | 43.416 |
| 12 | Pistole M2000 | 1 | 12.480 |
| 13 | Lanze mit Regeldüse 2505 | 1 | 12.710-D2505 |
| 16 | Gummidämpfer | 4 | 40.220 |
| 17 | Starlock-Kappe | 2 | 40.142 |
| 18 | Rad D245 pannensicher | 2 | 40.141 |
| 19 | Sechskantschraube M 6 x 40 | 2 | 40.133 |
| 20 | Flügelmutter M 6 | 2 | 40.132 |
| 21 | Mutter M 6 | 1 | 14.127 1 |
| 22 | Innensechskantschraube M 6 x 35 | 1 | 40.131 |
| 23 | Pistolenhalterung | 1 | 40.130 |
| 24 | Schraube 2,9 x 19 | 2 | 15.024 |
| 25 | Schlauchtrommel | 1 | 41.259 |
| 26 | Gummistopfen | 2 | 40.208 1 |
| 27 | Bügel | 1 | 41.101 6 |
| 28 | Elastic-Stop-Mutter M 8 | 2 | 41.410 |
| Motor Honda GX 160 CX | | 24.027 | |
| Nachrüstsatz Schlauchtrommel | | 41.259 1 | |
| mit 1m HD-Verbindungsschlauch | | | |
| mit 20m HD-Schlauch | | | |

Complete Assembly

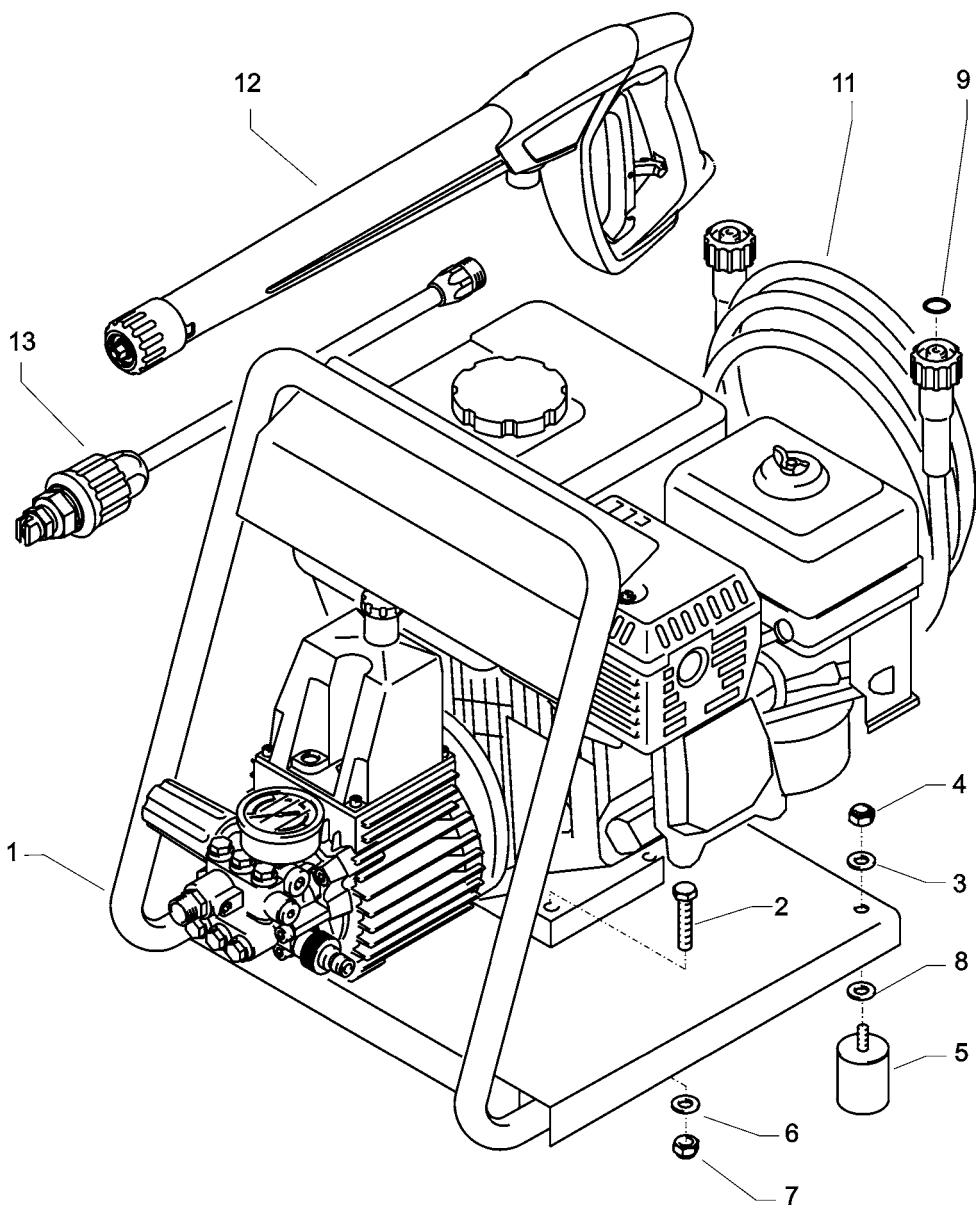


KRÄNZLE B 13/150

Spare parts list Profi-Jet B 13/150 portable Complete Assembly

| No. | Description | Qty. | Ord.-No. |
|------------------------------|--|------|---------------|
| 1 | Tragbügel | 1 | 41.098 3 |
| 2 | Sechskantschraube M 8 x 40 | 4 | 44.033 |
| 3 | Unterlegscheibe 6 mm DIN 125 | 4 | 41.511 |
| 4 | Elastic-Stop-Mutter M 6 | 4 | 14.152 1 |
| 5 | Gummifüße | 4 | 41.513 |
| 6 | Unterlegscheiben 8 mm DIN 125 | 4 | 41.515 |
| 7 | Elastic-Stop-Mutter M 8 | 4 | 41.410 |
| 8 | Unterlegscheiben 6 mm DIN 9021 | 16 | 41.516 |
| 9 | O-Ring 9,3 x 2,4 | 2 | 13.273 |
| 11 | Hochdruckschlauch 10 m / DN 6 - 210 bar1 | | 43.416 |
| 12 | Pistole M2000 | 1 | 12.480 |
| 13 | Lanze mit Regeldüse 2505 | 1 | 12.710-D2505 |
| Motor Honda GX 160 CX | | | 24.027 |

Transmission unit

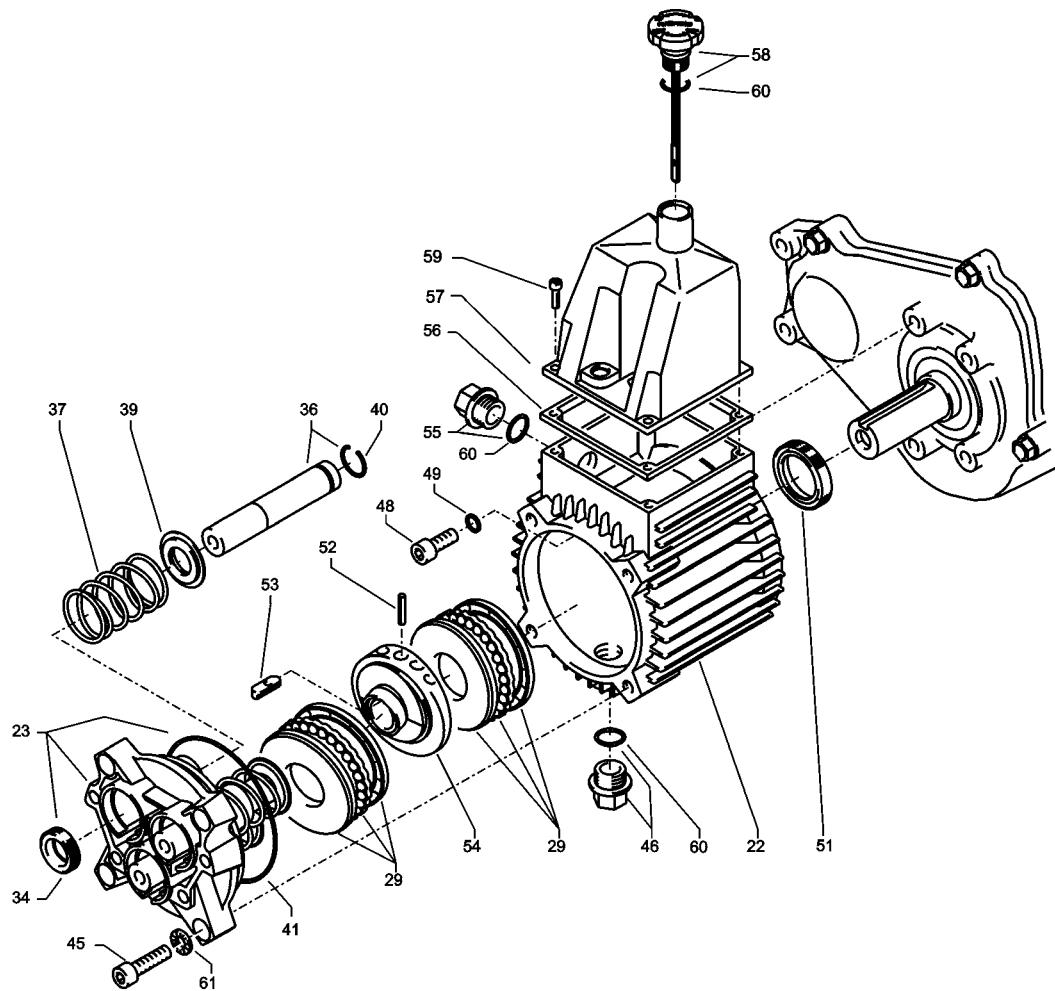


KRÄNZLE B 13/150

Spare parts list Profi-Jet B 13/150 Antrieb

| No. | Description | Qty. | Ord.-No. |
|--------------------------------|------------------------------------|------|-----------------|
| 22 | Getriebegehäuse | 1 | 41.481 1 |
| 23 | Gehäuseplatte 18 mm | 1 | 41.020 2 |
| 29 | Axial-Rillenkugellager 3-teilig | 2 | 43.486 |
| 34 | Öldichtung 18 x 28 x 7 | 3 | 41.031 |
| 36 | Plunger 18 mm | 3 | 41.032 1 |
| 37 | Plungerfeder | 3 | 41.033 |
| 39 | Federdruckscheibe 18 mm | 3 | 41.034 |
| 40 | Sprengring 18 mm | 3 | 41.035 |
| 41 | O-Ring Viton 88 x 2 | 1 | 41.021 1 |
| 45.1 | Innensechskantschraube M 8 x 30 | 4 | 41.036 1 |
| 46 | Ölablassstopfen M18x1,5 mit Magnet | 1 | 48.020 |
| 48 | Innensechskantschraube M 8 x 20 | 4 | 41.480 |
| 49 | Kupferdichtring | 4 | 41.500 |
| 51.1 | Wellendichtring 25 x 35 x 5 | 1 | 41.019 5 |
| 52 | Spannstift 3 x 16 | 1 | 14.148 1 |
| 53 | Stufenkeil | 1 | 41.183 |
| 54 | Taumelscheibe 11,5° | 1 | 41.028 6-11,5 |
| 55 | Verschlussstopfen M 18 x 1,5 | 1 | 41.011 |
| 56 | Flachdichtung | 1 | 41.019 3 |
| 57 | Deckel | 1 | 40.518 |
| 58 | Ölmessstab | 1 | 42.520 2 |
| 59 | Innensechskantschraube M 5 x 12 | 4 | 41.019 4 |
| 60 | O-Ring 14 x 2 | 3 | 43.445 |
| 61 | Sicherungsring | 4 | 40.054 |
| Motor Honda GX 160 | | | 24.027 |
| Antrieb kpl. Pos. 22-61 | | | 41.481 2 |

Valve housing

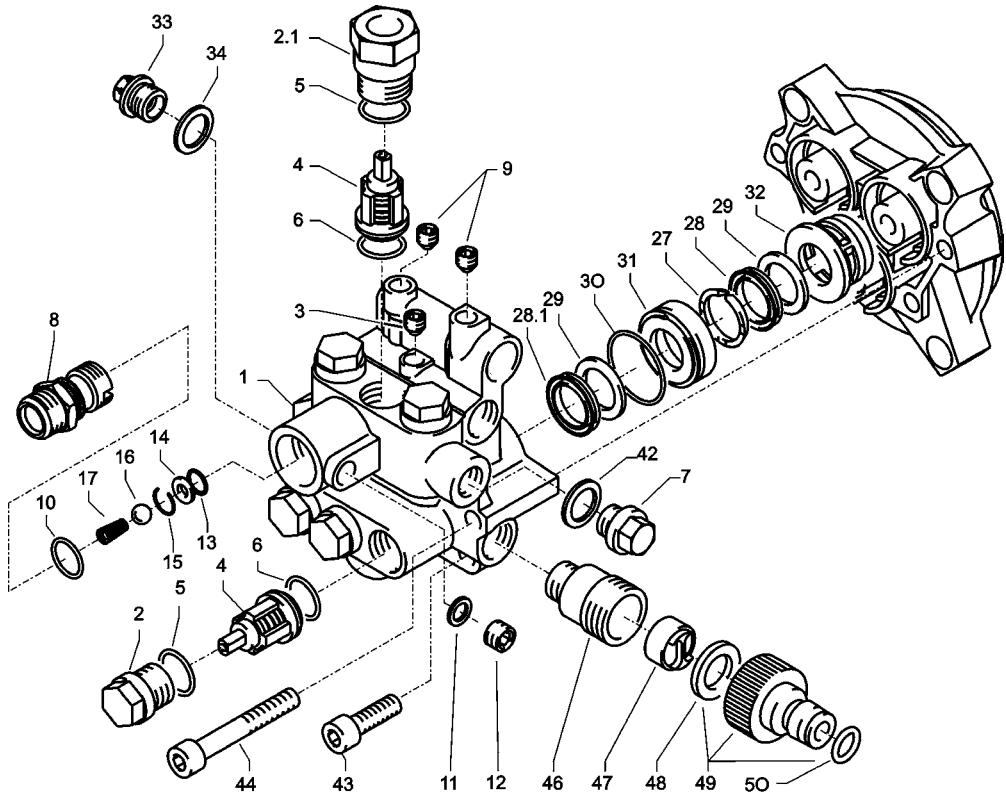


KRÄNZLE B 13/150

Spare parts list Profi-Jet B 13/150 Valve housing APG 18 mm

| No. | Description | Qty. | Ord.-No. |
|------|--|----------|----------|
| 1 | Ventilgehäuse APG für 18 mm Plunger-Durchmesser | 1 | 42.160 3 |
| 2 | Ventilstopfen | 5 | 41.714 |
| 2.1 | Ventilstopfen mit R1/4" IG | 1 | 42.026 1 |
| 3 | Dichtstopfen M 10 x 1 | 1 | 43.043 |
| 4 | Ventile (grün) für APG-Pumpe | 6 | 41.715 1 |
| 5 | O-Ring 16 x 2 | 8 | 13.150 |
| 6 | O-Ring 15 x 2 | 6 | 41.716 |
| 7 | Dichtstopfen R 1/4" mit Bund | 1 | 42.103 |
| 8 | Ausgangsteil M22x1,5 | 1 | 40.522 1 |
| 9 | Dichtstopfen M 8 x 1 | 2 | 13.158 |
| 10 | O-Ring 18 x 2 | 1 | 43.446 |
| 11 | Aluminium - Dichtring | 3 | 13.275 |
| 12 | Stopfen 1/4" AG mit ISK | 1 | 13.387 |
| 13 | O-Ring 11 x 1,5 | 1 | 12.256 |
| 14 | Edelstahlsitz Ø 7 | 1 | 14.118 |
| 15 | Sprengring | 1 | 12.258 |
| 16 | Edelstahlkugel Ø10 | 1 | 12.122 |
| 17 | Rückschlagfeder „K“ | 1 | 14.120 1 |
| 27 | Druckring | 3 | 41.018 |
| 28 | Manschette 18 x 26 x 4/2 | 3 | 41.013 |
| 28.1 | Gewebemanschette 18 x 26 x 4/2 | 3 | 41.013 1 |
| 29 | Backring | 6 | 41.014 |
| 30 | O-Ring 28,3 x 1,78 | 3 | 40.026 |
| 31 | Leckagering | 3 | 41.066 |
| 32 | Zwischenring | 3 | 41.015 2 |
| 33 | Verschlussstopfen R3/8" | 1 | 14.113 |
| 34 | Kupferring 17 x 22 x 1,5 | 1 | 40.019 |
| 42 | Usit-Ring | 1 | 42.104 |
| 43 | Innensechskantschraube M 8 x 30 | 2 | 41.036 1 |
| 44 | Innensechskantschraube M 8 x 55 | 2 | 41.017 1 |
| 46 | Sauganschluss | 1 | 41.016 |
| 47 | Wasserfilter | 1 | 41.046 1 |
| 48 | Gummidichtrung | 1 | 41.047 1 |
| 49 | Steckkupplung | 1 | 41.047 2 |
| 50 | O-Ring | 1 | 41.047 3 |
| | Repair kit Valves for APG-Pump consistion of 6x No. 4; 6x No. 5; 6x No. 6 | 41.748 1 | |
| | Repair kit sleeves 18 mm consisting of 3x No. 27; 3x No. 28; 3x No. 28.1; 6x No. 29; 6x No. 30 | | 41.049 2 |
| | Valvehousing compl. with integr. ULH | | 43.442 |

Unloader

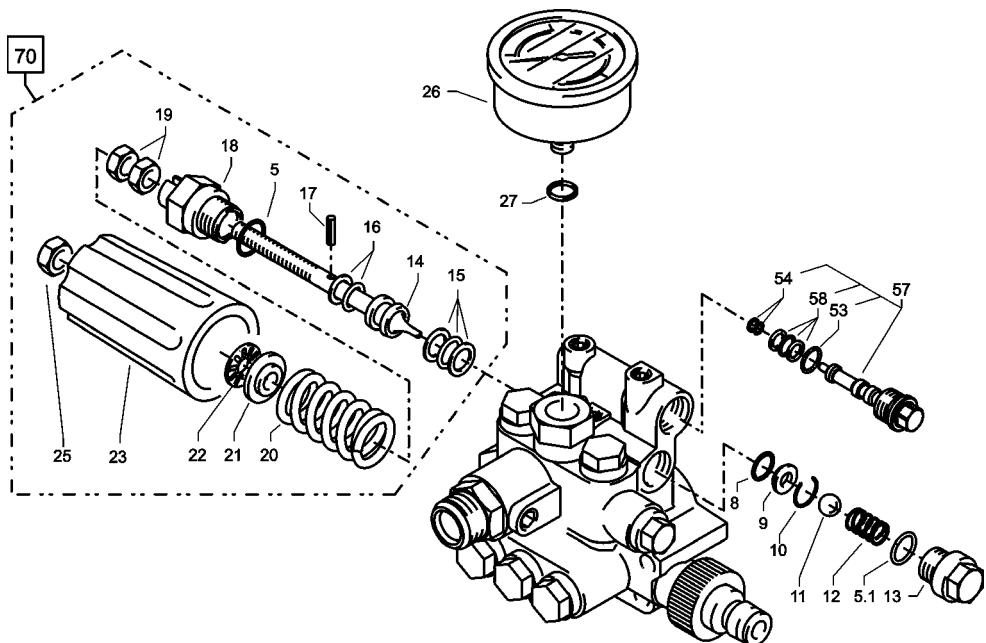


Kräntze B 13/150

Spare parts list Profi-Jet B 13 / 150 Unloader

| No. | Description | Qty. | Ord.-No. |
|-----------|---|------|---------------|
| 5 | O-Ring 16 x 2 | 1 | 13.150 |
| 5.1 | O-Ring 13,94 x 2,62 | 1 | 42.167 |
| 8 | O-Ring 11 x 1,44 | 1 | 12.256 |
| 9 | Edelstahlsitz | 1 | 14.118 |
| 10 | Sicherungsring | 1 | 13.147 |
| 11 | Edelstahlkugel | 1 | 13.148 |
| 12 | Edelstahlfeder | 1 | 14.119 |
| 13 | Verschlusssschraube | 1 | 14.113 |
| 14 | Steuerkolben | 1 | 14.134 |
| 15 | Parbaks 16 mm | 1 | 13.159 |
| 16 | Parbaks 8 mm | 1 | 14.123 |
| 17 | Spannstift | 1 | 14.148 |
| 18 | Kolbenführung spezial | 1 | 42.105 |
| 19 | Kontermutter M 8 x 1 | 2 | 14.144 |
| 20 | Ventilfeder schwarz | 1 | 14.125 |
| 21 | Federdruckscheibe | 1 | 14.126 |
| 22 | Nadellager | 1 | 14.146 |
| 23 | Handrad | 1 | 14.147 |
| 25 | Elastic-Stop-Mutter M 8 x 1 | 1 | 14.152 |
| 26 | Manometer 0-250 Bar | 1 | 15.039 |
| 27 | Aluminium-Dichtring | 2 | 13.275 |
| 50 | O-Ring 3,3 x 2,4 | 1 | 12.136 |
| 53 | O-Ring 14 x 2 | 1 | 43.445 |
| 54 | Parbaks 4mm | 1 | 12.136 2 |
| 57 | Blindverschluss mit Dichtungen | 1 | 44.551 |
| 58 | Parbaks 7mm | 1 | 15.013 |
| 70 | Piston valve compl. with handwheel | | 43.444 |

Complete Assembly

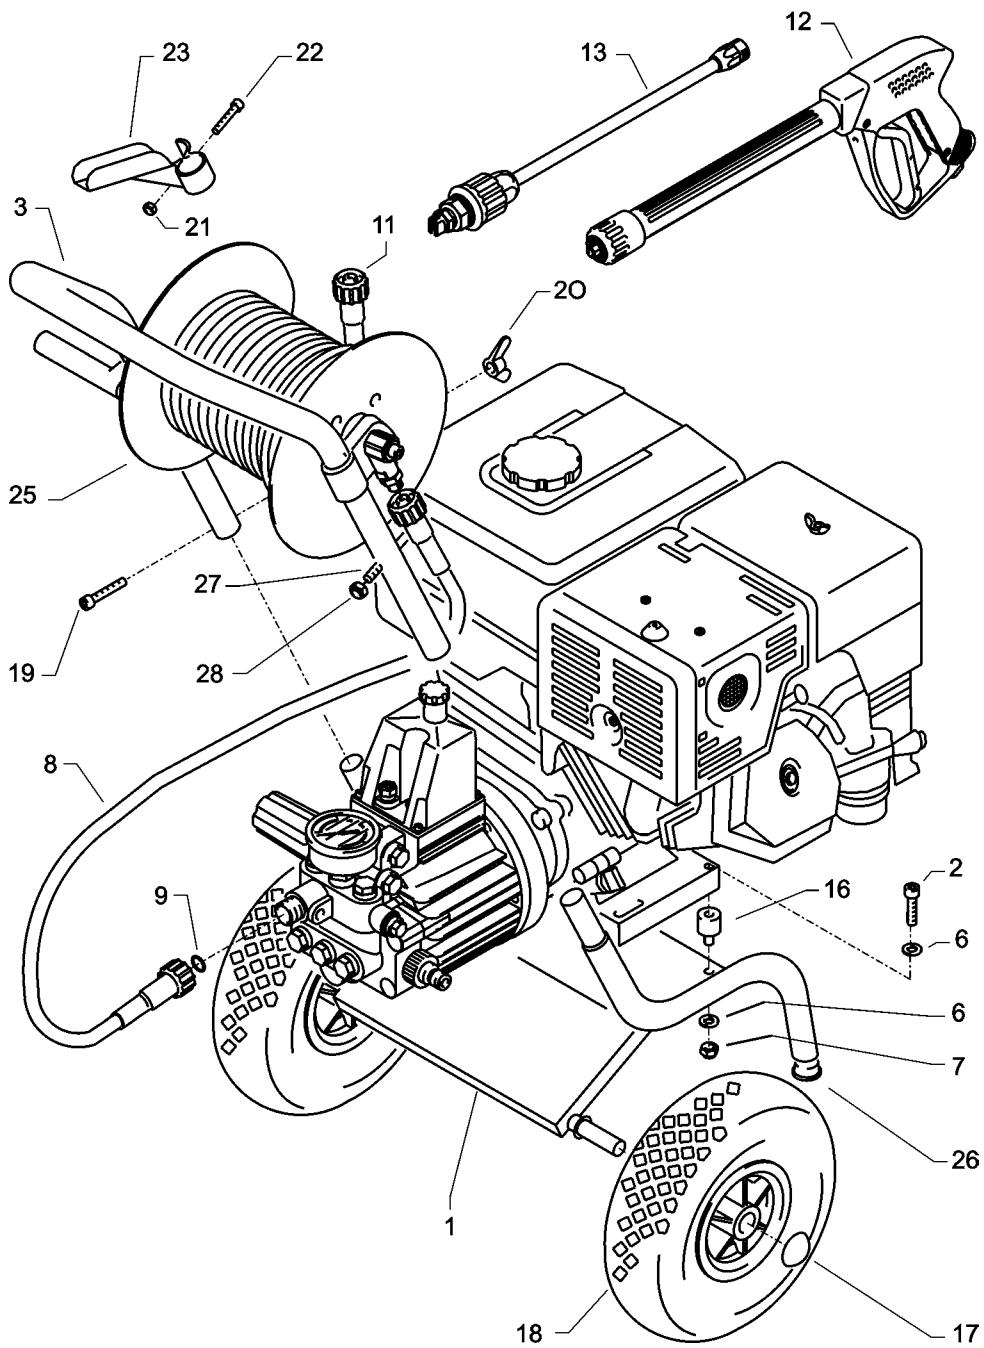


KRÄNZLE B 16/220

Spare parts list Profi-Jet B 16/220-B 16/250 with undercarriage Complete Assembly

| No. | Description | Qty. | Ord.-No. |
|--|---|------|-----------------|
| 1 | Wagen | 1 | 41.101 7 |
| 1a | Wagen kompl. (Pos. 1 + 3) | 1 | 41.101 5 |
| 2 | Sechskantschraube M 8 x 30 | 2 | 40.221 |
| 2.1 | Sechskantschraube M 8 x 35 | 2 | 44.033 3 |
| 3 | Schubbügel | 1 | 41.101 6 |
| 6 | Unterlegscheibe 8,4 DIN 125 | 8 | 41.515 |
| 7 | Elastic-Stop-Mutter M 8 | 4 | 41.410 |
| 8 | Hochdruckschlauch 1m / DN 8 - 210 bar | 1 | 41.265 |
| 9 | O-Ring 9,3 x 2,4 | 3 | 13.273 |
| 11a | bei Gerät mit Schlauchtrommel Hochdruckschlauch 15 m / DN 8 - 210 bar | 1 | 41.083 |
| 11b | bei Gerät ohne Schlauchtrommel Hochdruckschlauch 10 m / DN 8 - 210 bar | 1 | 41.082 |
| 12 | Starlett II mit ISO-Handgriff | 1 | 12.320 2 |
| 13 | Lanze mit Regeldüse 2505 (B16/220) | 1 | 12.710-D2505 |
| 13.1 | Lanze mit Regeldüse 25045 (B16/250) | 1 | 12.710-D25045 |
| 14 | Saugschlauch 3 m mit Saugfilter | 1 | 15.038 3 |
| 16 | Gummidämpfer | 4 | 40.220 |
| 17 | Starlock-Kappe | 2 | 40.142 |
| 18 | Rad D245 pannensicher | 2 | 40.141 |
| 19 | Sechskantschraube M 6 x 40 | 2 | 40.133 |
| 20 | Flügelmutter M 6 | 2 | 40.132 |
| 21 | Mutter M 6 | 1 | 14.127 1 |
| 22 | Innensechskantschraube M 6 x 35 | 1 | 40.131 |
| 23 | Pistolenablage | 1 | 40.130 |
| 24 | Schraube 2,9 x 19 | 2 | 15.024 |
| 25 | Schlauchtrommel kpl. ohne Schlauch | 1 | 41.259 |
| 26 | Gummistopfen | 2 | 40.208 1 |
| 27 | Bügel | 1 | 41.101 6 |
| 28 | Elastic-Stop-Mutter M 8 | 2 | 41.514 |
| Speedcontrol with 1m Bowden cable | | 1 | 40.255 1 |
| Motor Honda GX 340 (B16/220) | | | 24.026 |
| Motor Honda GX 390 (B16/250) | | | 24.026 1 |
| AQ-Pump compl. | | | 40.265 |
| Upgrade kit hose drum | | | 41.259 1 |
| with 1 m HP-Connection hose | | | |
| with 20 m HP-hose | | | |

Transmission unit

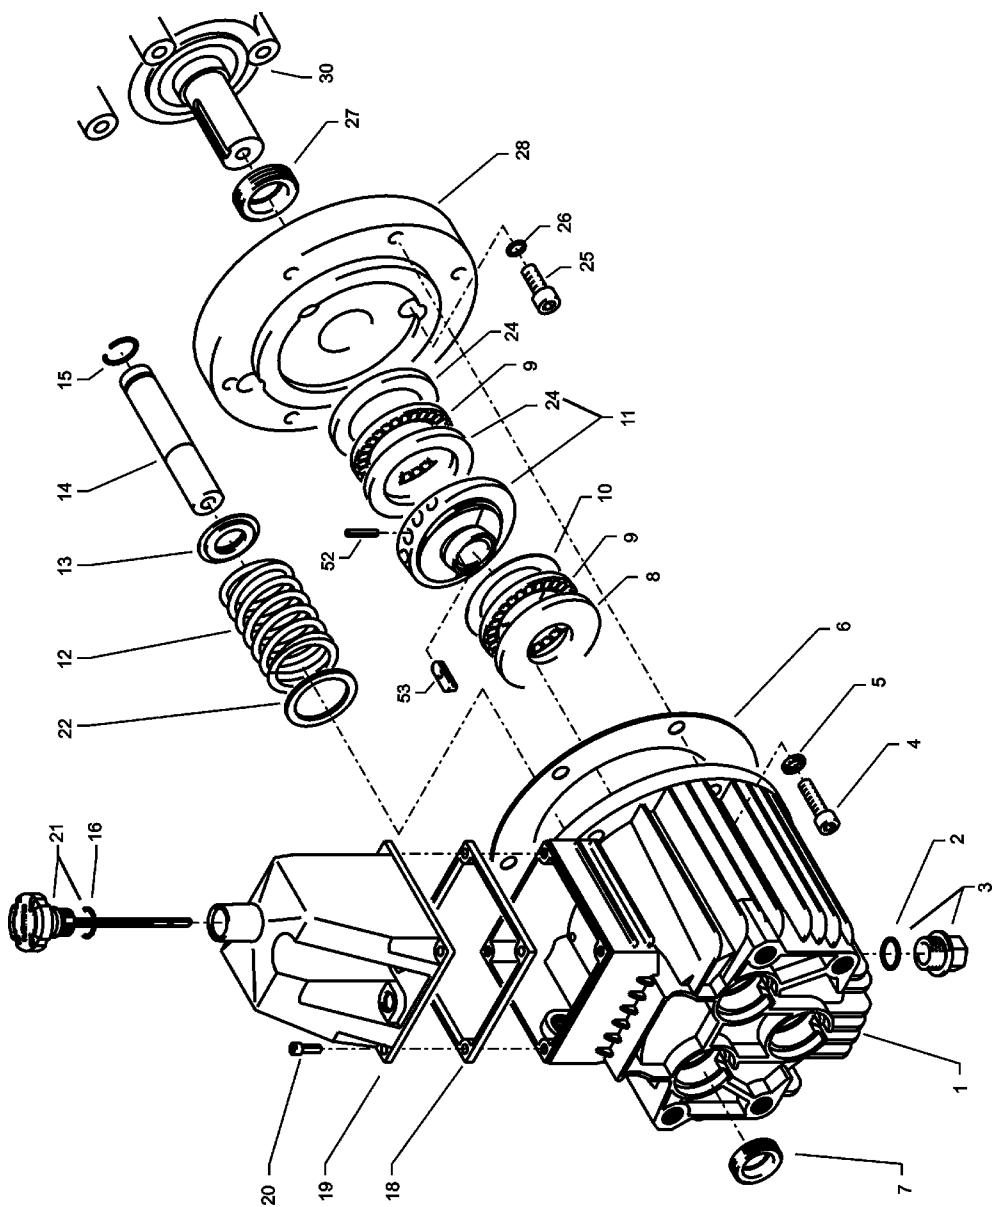


KRÄNZLE B 16/220 - B 16/250

Spare parts list Profi-Jet B 16/220-B16/250 Transmission unit AQ-Pump

| No. | Description | Qty. | Ord.-No. |
|-----|---------------------------------|------|------------|
| 1 | Ölgehäuse | 1 | 40.501 |
| 2 | O-Ring 13,94 x 2,62 | 1 | 42.167 |
| 3 | Ölablassstopfen R 3/8" | 1 | 42.019 |
| 4 | Innensechskantschraube M 8 x 25 | 6 | 40.053 |
| 5 | Sicherungsscheibe | 6 | 40.054 |
| 6 | Flachdichtung | 1 | 40.511 |
| 7 | Öldichtung 20 x 30 x 7 | 3 | 40.044.1 |
| 8 | Weizenscheibe | 1 | 40.043 |
| 9 | Axial-Rollenkäfig | 1 | 40.040 |
| 10 | AS-Scheibe | 1 | 40.041 |
| 11 | Taumescheibe 8,0° | 1 | 40.055-8,0 |
| 12 | Plungerfeder | 3 | 40.506 |
| 13 | Fedderdruckscheibe | 3 | 40.510 |
| 14 | Plunger 20 mm (lang) | 3 | 40.505 |
| 15 | Sprengring | 3 | 40.048 |
| 16 | O-Ring 14 x 2 | 1 | 43.445 |
| 18 | Flachdichtung | 1 | 41.019.3 |
| 19 | Deckel Ölgehäuse | 1 | 40.518 |
| 20 | Innensechskantschraube M 5 x 12 | 4 | 41.019.4 |
| 21 | Ölmessstab | 1 | 42.520.2 |
| 22 | Stützscheibe | 3 | 40.513 |
| 24 | Gehäusescheibe | 2 | 40.039 |
| 25 | Innensechskantschraube M 8 x 30 | 4 | 41.036.1 |
| 26 | Kupfer-Dichtring | 4 | 41.500 |
| 27 | Dichtring 30 x 42 x 7 | 1 | 40.224 |
| 28 | Flansch für B 16/220 | 1 | 40.223 |
| 30 | Motor Honda GX 340 | 1 | 24.026 |
| 52 | Spannstift 3 x 16 | 1 | 14.148.1 |
| 53 | Stufenkeil | 1 | 40.222 |

Valve housing

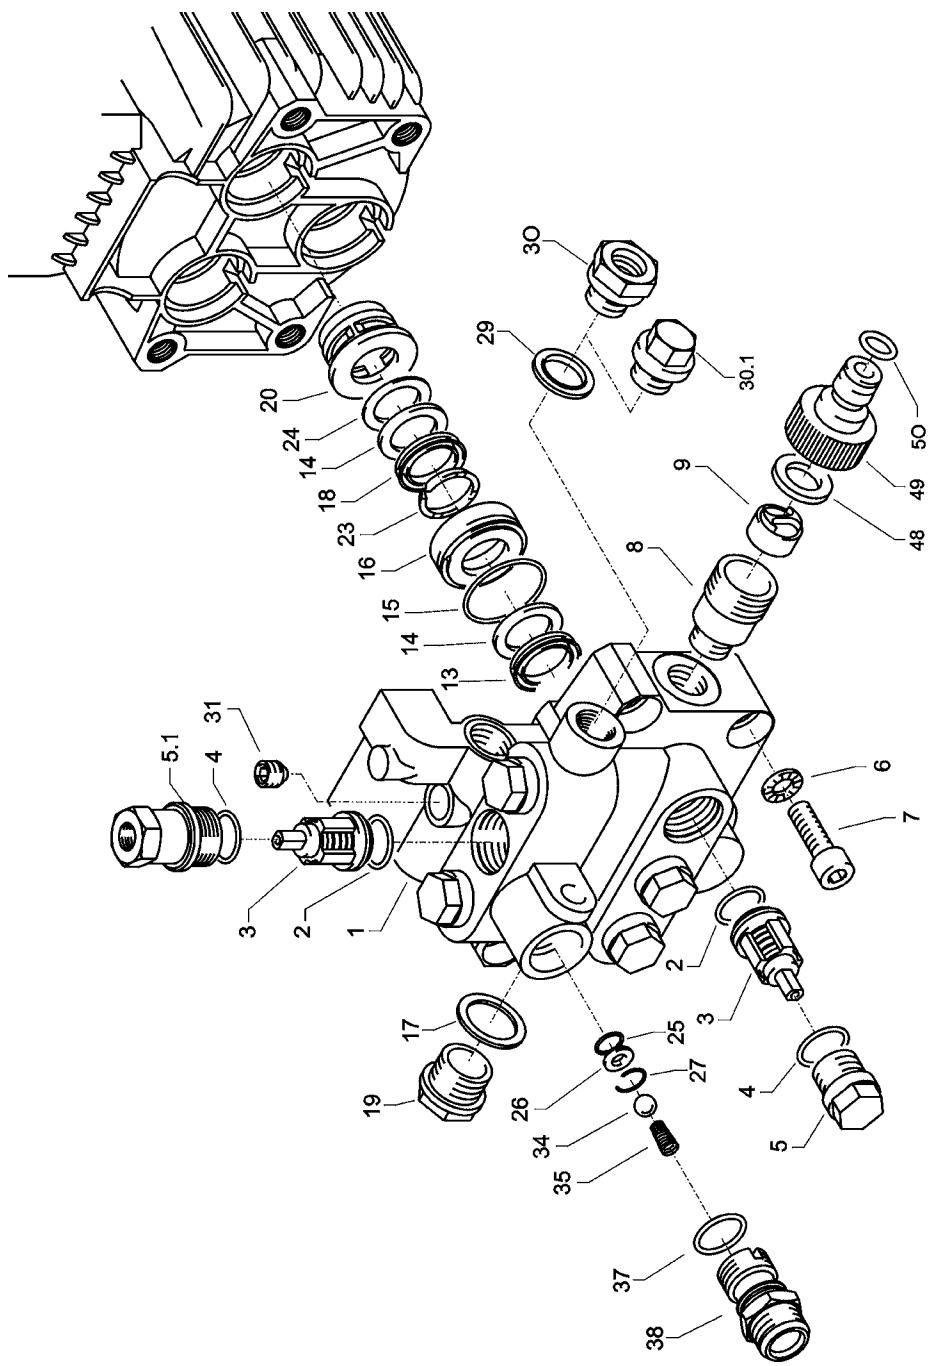


KRÄNZLE B 16/220 - B 16/250

Spare parts list Profi-Jet B 16/220-B 16/250 Valve housing AQ-Pump

| No. | Description | Qty. | Ord.-No. | No. | Description | Qty. | Ord.-No. |
|------|---|------|----------|------|--------------------------------------|------|---------------|
| 1 | Ventilgehäuse AQ mit integr. UL ohne integri. Druckschalter | 1 | 40.521 | 31 | Dichtstopfen M 10 x 1 | 1 | 43.043 |
| 2 | O-Ring 18 x 2 | 6 | 40.016 | 34 | Edelstahlkugel Ø10 | 1 | 12.122 |
| 3 | Einlass- Auslass- Ventil | 6 | 42.024 | 35 | Rückschlagfeder „K“ | 1 | 14.120 |
| 4 | O-Ring 21 x 2 | 6 | 42.025 | 37 | O-Ring 18 x 2 | 1 | 43.446 |
| 5 | Ventilstopfen | 5 | 42.026 | 38 | Ausgangsstück Injektor ST30 M22x1,5 | 1 | 40.522 |
| 5.1 | Ventilstopfen mit R 1/4" IG | 1 | 42.026 | 48 | Gummidichtung für Steckkupplung | 1 | 41.047 |
| 6 | Sicherungsring | 4 | 40.032 | 49 | Steckkupplung für Wassereingang | 1 | 41.047 |
| 6 | Innensechskantschraube M 12 x 45 | 4 | 40.504 | 49.1 | Steckkupplung kpl. | 2 | 41.047 |
| 7 | Sauganschluss R 1/2" AG | 1 | 41.016 | 50 | Pos. 48 - 50 | 1 | 41.047 |
| 8 | Wassereingangsfilter | 1 | 41.046 | 2 | O-Ring | 1 | 40.065 |
| 9 | Gewebemanschette | 3 | 40.023 | | Repair kit sleeves | | |
| 13 | Backring 20 mm | 6 | 40.025 | | consisting of: 3x No. 13; 6x No. 14; | | |
| 14 | O-Ring 31,42 x 2,62 | 3 | 40.508 | | 3x No. 15; 3x No. 16; 3x No. 18; | | |
| 15 | Leckageing 20 x 36 x 13,3 | 3 | 40.509 | | 3x No. 20; 3x No. 23 | | |
| 16 | Cu-Dichtiring 21 x 28 x 1,5 | 1 | 42.039 | | Repair kit sleeves without | | |
| 17 | Gummimanschette | 3 | 40.512 | | brassparts consisting of: | | |
| 18 | Verschluss schraube R 1/2" | 1 | 42.032 | | 3x No. 13; 6x No. 14; 3x No. 15; | | |
| 19 | Distanzring mit Abstützung | 3 | 40.507 | | 3x No. 18; 3x No. 23 | | |
| 20 | Druckring 20 mm | 3 | 40.021 | | Repair kit Valves | | |
| 23 | Zwischenring 20 mm | 3 | 40.516 | | consisting of: | | |
| 24 | O-Ring 11 x 1,5 | 1 | 12.256 | | 6x No. 2; 6x No. 3; 6x No. 4 | | |
| 25 | Edelstahlsitz Ø 7 | 1 | 14.118 | | Repair kit Valves | | |
| 26 | Sprengring | 1 | 13.147 | | consisting of: | | |
| 27 | Dichtring 17 x 22 x 1,5 (Kupfer) | 1 | 40.019 | | 6x No. 2; 6x No. 3; 6x No. 4 | | |
| 29 | Anschlussmuffe 3/8" AG x 3/8" G bei | 1 | 13.136 | | 40.018 | | |
| 30 | Ausführung mit Drehzahlregulierung | 1 | | | | | |
| 30.1 | Verschlussschraube 3/8" AG bei | 1 | | | | | |
| | Ausführung ohne Drehzahlregulierung | | | | | | |

Unloadervalve

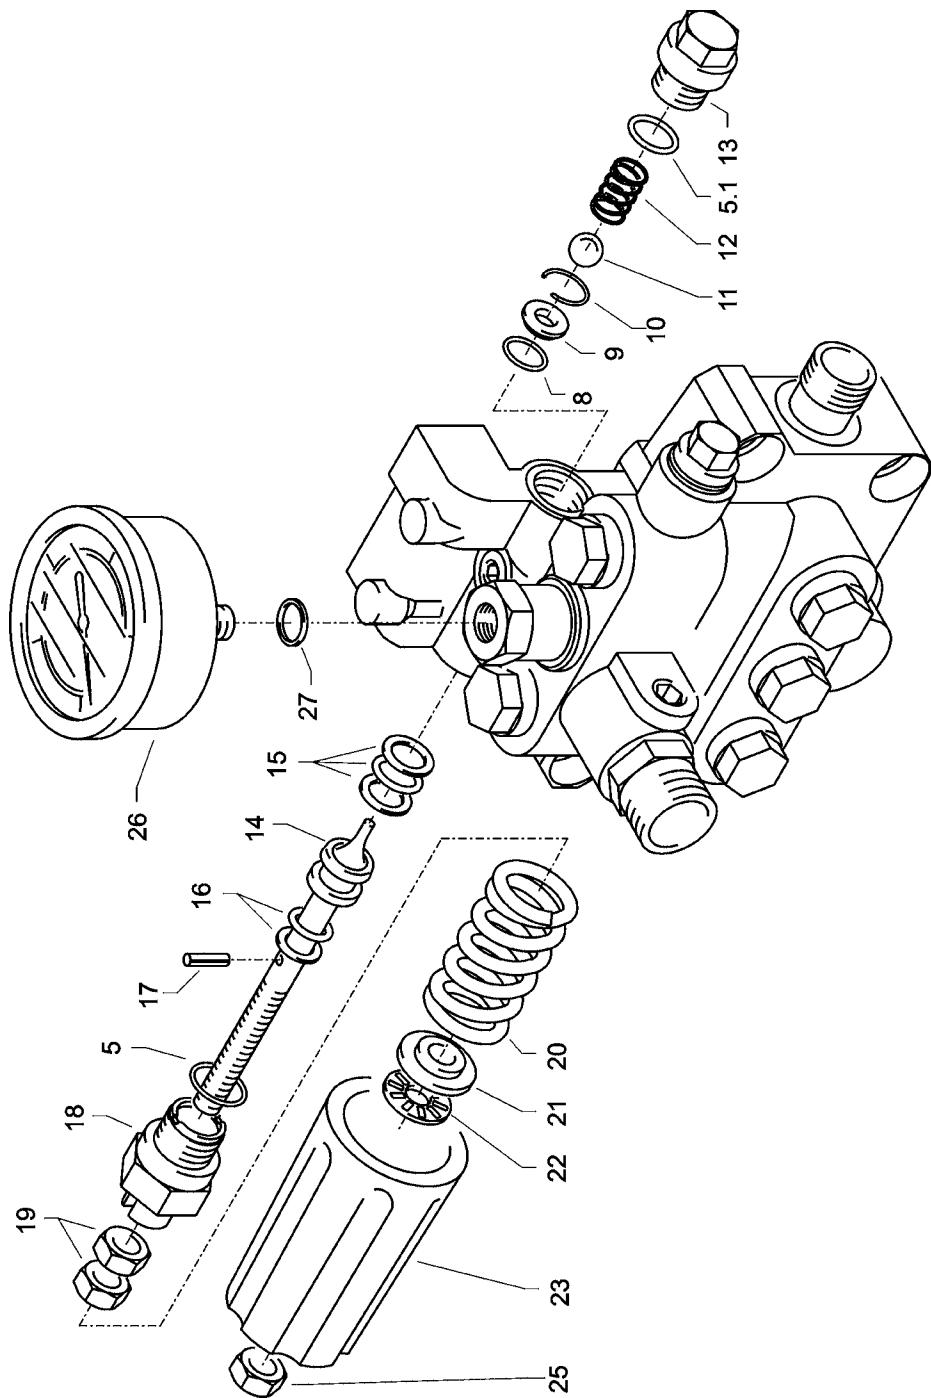


KRÄNZLE B 16/220 - B 16/250

Spare parts list Profi-Jet B 16/220 -B 16/250 Unloadervalve AQ-Pump

| No. | Description | Qty. | Ord.-No. |
|-----|-----------------------------|------|----------|
| 5 | O-Ring 16 x 2 | 1 | 13.150 |
| 5.1 | O-Ring 13,94 x 2,62 | 1 | 42.167 |
| 8 | O-Ring 11 x 1,44 | 1 | 12.256 |
| 9 | Edelstahlsitz | 1 | 14.118 |
| 10 | Sicherungsring | 1 | 13.147 |
| 11 | Edelstahlkugel | 1 | 13.148 |
| 12 | Edelstahlfeder | 1 | 14.119 |
| 13 | Verschluss schraube | 1 | 14.113 |
| 14 | Steuerkolben | 1 | 14.134 |
| 15 | Parbaks 16 mm | 1 | 13.159 |
| 16 | Parbaks 8 mm | 1 | 14.123 |
| 17 | Spannstift | 1 | 14.148 |
| 18 | Kolbenführung spezial | 1 | 42.105 |
| 19 | Konterschraube M 8 x 1 | 2 | 14.144 |
| 20 | Ventilfeder schwarz | 1 | 14.125 |
| 21 | Federdruckscheibe | 1 | 14.126 |
| 22 | Nadel Lager | 1 | 14.146 |
| 23 | Handrad | 1 | 14.147 |
| 25 | Elastic-Stop-Mutter M 8 x 1 | 1 | 14.152 |
| 26 | Manometer 0-400 Bar | 1 | 15.039 4 |
| 27 | Aluminium-Dichtring | 2 | 13.275 |

Hose drum

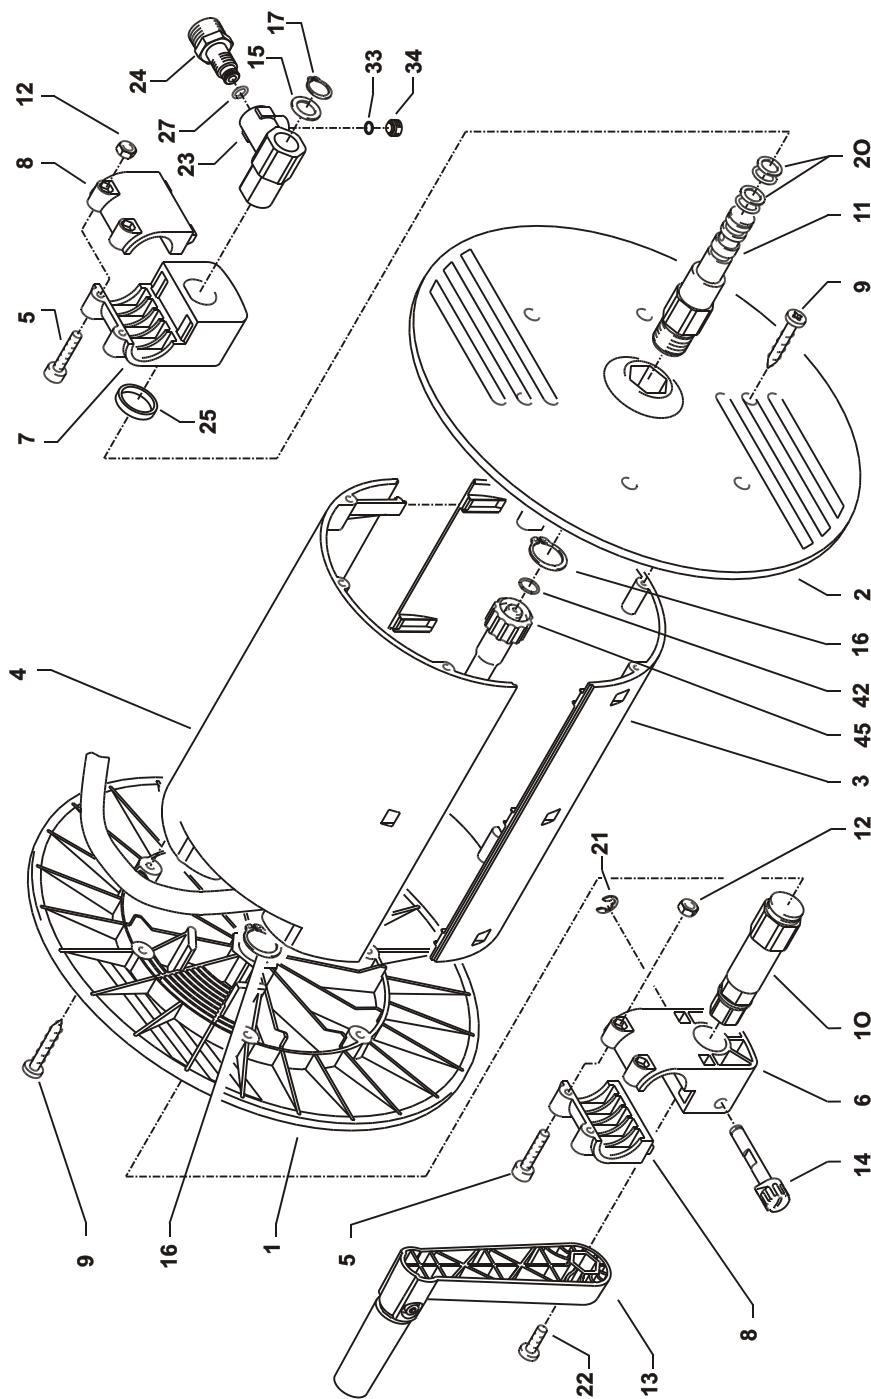

KRÄNZLE B13/150;B16/220;B16/250

Spare parts list Profi-Jet B 13/150; B 16/220 -B 16/250

| Hose Drum | | | | | |
|-----------|---------------------------------|------|----------|-----|-----------------------------|
| No. | Description | Qty. | Ord.-No. | No. | Description |
| 1 | Seitenschale Schlauchführung | 1 | 40.302 | 21 | Sicherungsscheibe 6 DIN6799 |
| 2 | Seitenschale Wasserleitung | 1 | 40.301 | 22 | Schraube M 5 x 10 |
| 3 | Trommel Unterteil | 1 | 40.304 | 23 | Drehgelenk |
| 4 | Trommel Oberteil | 1 | 40.303 | 24 | Anschlußteil |
| 5 | Innensechskantschraube M 4 x 30 | 4 | 40.236 | 25 | Distanzring |
| 6 | Lagerklotz mit Bremse | 1 | 40.306 | 27 | O-Ring 6,68 x 1,78 |
| 7 | Lagerklotz links | 1 | 40.305 | 33 | O-Ring 6 x 1,5 |
| 8 | Klemmstück | 2 | 40.307 | 34 | Stopfen M 10 x 1 |
| 9 | Kunststoffschraube 5,0 x 20 | 12 | 50.157 | 42 | O-Ring 9,3 x 2,4 |
| 10 | Antriebswelle | 1 | 40.310 | 45 | Hochdruckschlauch 20 m NW 8 |
| 11 | Welle Wasserleitung | 1 | 40.311 | | |
| 12 | Elastic-Stop-Mutter M 4 | 4 | 40.111 | | |
| 13 | Handkurbel | 1 | 40.320 0 | | |
| 14 | Verriegelungsbolzen | 1 | 40.312 | | |
| 15 | Scheibe MS 16 x 24 x 2 | 1 | 40.181 | | |
| 16 | Wellensicherungsring 22 mm | 2 | 40.117 | | |
| 17 | Wellensicherungsring 16 mm | 1 | 40.182 | | |
| 20 | Parbaks 16 mm | 2 | 13.159 | | |


41.259 1

Hose Drum kpl.
without Schlauch

41.259 0

Hose Drum kpl.
with Schlauch


Speed control

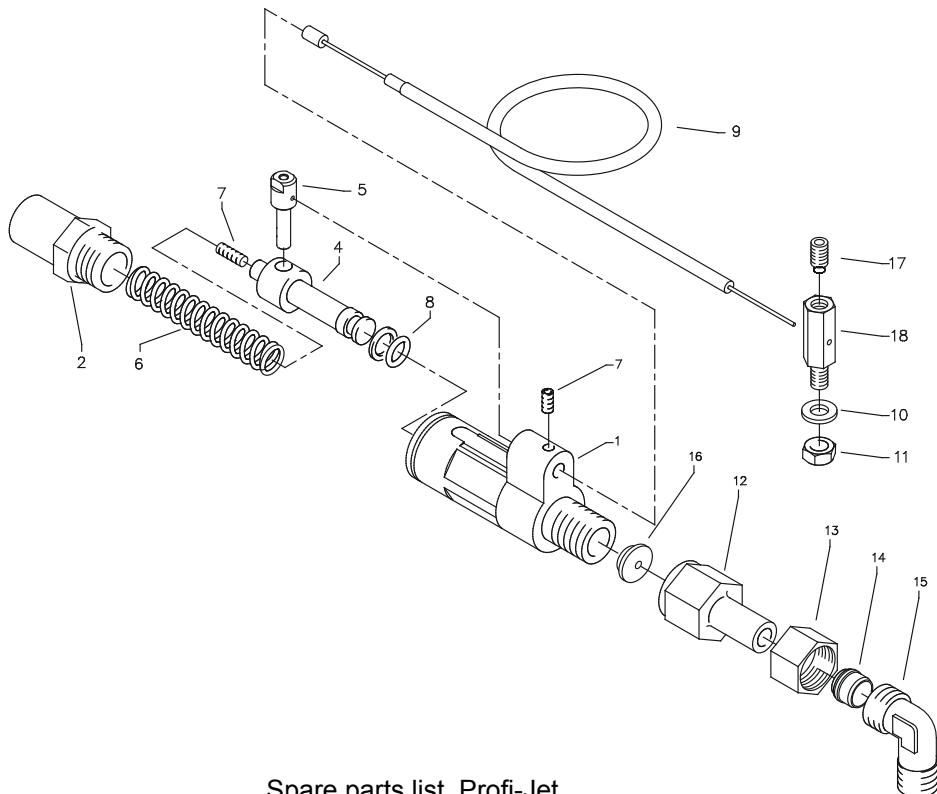

Spare parts list Profi-Jet
Speed control

| No. | Description | Qty. | Ord.-No. |
|-----|------------------------------------|------|----------|
| 1 | Grundteil | 1 | 42.581 |
| 2 | Druckhülse | 1 | 42.584 |
| 4 | Steuerkolben | 1 | 42.582 |
| 5 | Querbolzen | 1 | 42.583 |
| 6 | Druckfeder 2,0 x 9,5 x 70 | 1 | 42.587 |
| 7 | Gewindestift M4 x 6 DIN 913-A2 | 1 | 42.592 |
| 8 | Parbaks 7 mm | 1 | 15.013 |
| 9 | Bowdenzug | 1 | 42.586 |
| 10 | Unterlegscheibe 6,4 DIN 125 | 1 | 50.189 |
| 11 | Sechskantmutter M6 | 1 | 14.152 1 |
| 12 | Anschlussmuffe Drehzahlregulierung | 1 | 42.585 |
| 13 | Überwurfmutter | 1 | 40.075 |
| 14 | Klemmhülse | 1 | 40.074 |
| 15 | Winkelverschraubung 3/8" x 12I | 1 | 44.092 |
| 16 | Drosselscheibe | 1 | 42.589 |
| 17 | Gewindestift M 6 x 12 DIN915 | 1 | 42.590 |
| 18 | Klemmbolzen | 1 | 42.591 |


Starlet II - Pistole

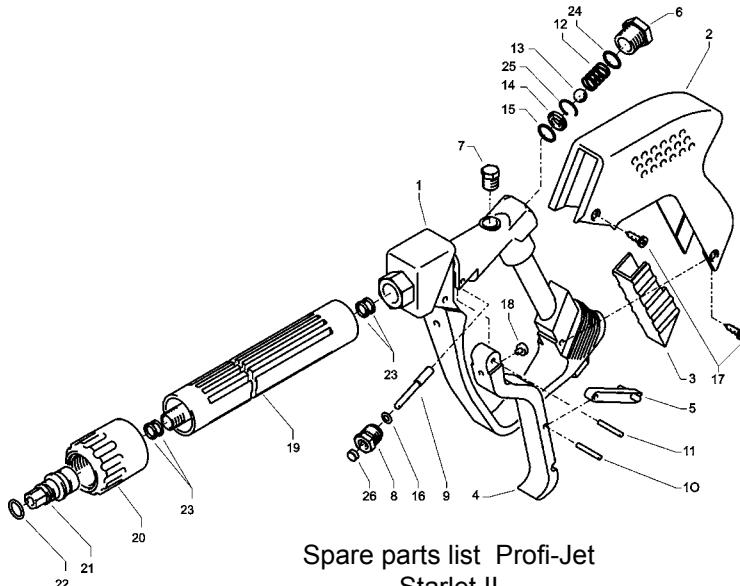

**Spare parts list Profi-Jet
Starlet II**

| No. | Description | Qty. | Ord.-No. |
|-----|--|------|----------|
| 1 | Ventilkörper mit Handgriff | 1 | 12.294 |
| 2 | Schutzhülse | 1 | 12.295 |
| 3 | Abdeckschutz | 1 | 12.296 |
| 4 | Abzugshebel grau | 1 | 12.298 3 |
| 5 | Sicherungshebel | 1 | 12.149 |
| 6 | Abschlusssschraube M 16 x 1 | 1 | 12.247 |
| 7 | Stopfen | 1 | 12.287 |
| 8 | Gewindeführungshülse 3mm R 1/4" AG | 1 | 12.250 1 |
| 9 | Aufsteuerbolzen abgesetzt 3mm | 1 | 12.284 1 |
| 10 | Stift | 1 | 12.148 |
| 11 | Lagernadel | 1 | 12.253 |
| 12 | Edelstahlfeder | 1 | 12.246 |
| 13 | Edelstahlkugel | 1 | 12.245 |
| 14 | Edelstahlsitz | 1 | 14.118 |
| 15 | O-Ring 11 x 1,44 | 1 | 12.256 |
| 16 | O-Ring 2,84 x 2,62 | 1 | 12.136 1 |
| 17 | Blechschraube 3,9 x 8 | 4 | 12.297 |
| 18 | Druckstück | 1 | 12.252 |
| 19 | Rohr kunststoffumspritzt bds. R 1/4" AG | 1 | 15.004 5 |
| 20 | Überwurfmutter ST30 M 22 x 1,5 IG | 1 | 13.276 1 |
| 21 | Außen-Sechskant-Nippel R 1/4" IG | 1 | 13.277 1 |
| 22 | O-Ring 9,3 x 2,4 | 1 | 13.273 |
| 23 | Aluminium-Dichtring | 4 | 13.275 |
| 24 | O-Ring 15 x 1,5 | 1 | 12.129 1 |
| 25 | Sicherungsring | 1 | 12.258 |
| 26 | Gleitbüchse 3mm | 1 | 12.289 1 |
| | Starlet - Gun with extention | | 12.320 2 |
| | Repair kit „Starlet II“ | | 12.299 |
| | consisting of No. 9,10,13,14,15 | | |


Turbokiller

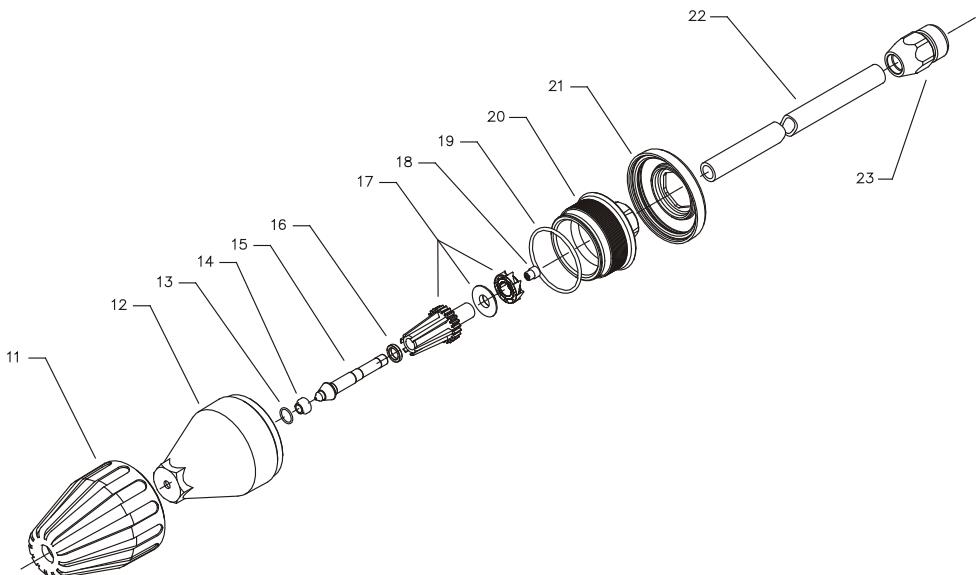

Spare parts list Profi-Jet
Turbokiller 055

| No. | Description | Qty. | Ord.-No. |
|-----------------------------------|------------------------------|------|----------|
| 11 | Sprühköperschutz | 1 | 41.528 |
| 12 | Sprühkörper | 1 | 41.529 |
| 13 | O-Ring 6,86 x 1,78 | 1 | 41.521 |
| 14 | Düsensitz | 1 | 41.522 |
| 15 | Düse 055 | 1 | 41.532 |
| 16 | Ring | 1 | 41.533 |
| 17 | Rotor | 1 | 41.534 |
| 18 | Stabilisator | 1 | 41.524 |
| 19 | O-Ring 41 x 1,78 | 1 | 41.538 |
| 20 | Deckel | 1 | 41.539 |
| 21 | Deckelschutz | 1 | 41.540 |
| 22 | Rohr 600 mm lang; bds. R1/4" | 1 | 12.385 2 |
| 23 | Nippel M22x1,5 x R1/4" IG | 1 | 13.370 |
| Turbokiller 055 compl. with Lance | | | 41.072 4 |
| Rep. kit Turbokiller 055 | | | 41.097 1 |

Standard regulation nozzle

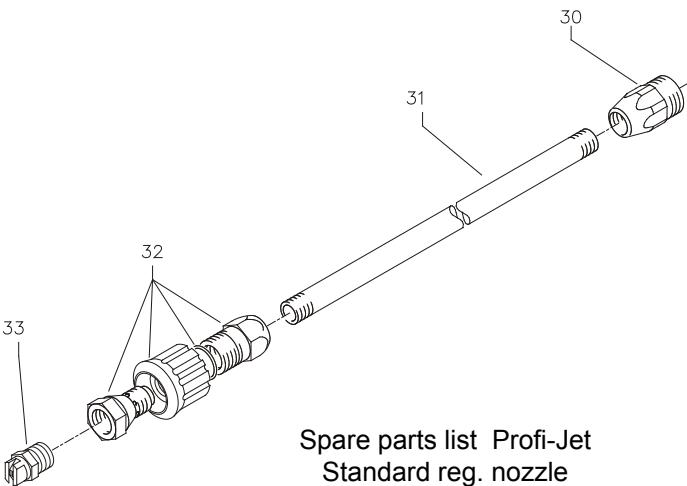

Spare parts list Profi-Jet
Standard reg. nozzle

| No. | Description | Qty. | Ord.-No. |
|-----|-----------------------------------|------|----------|
| 30 | Nippel ST30 M22x1,5 AG / M 12 x 1 | 1 | 13.363 |
| 31 | Rohr 600 mm lang; bds. R1/4" | 1 | 12.385 2 |
| 32 | Regeldüse mit Regulierring | 1 | 13.201 |
| 33 | Flat spray nozzle 2505 | 1 | D2505 |

Please specify size of nozzle

Guarantee

The guarantee is only valid for material and manufacturing errors.
Wearing does not fall within this guarantee.


The instructions in our operating manual must be complied with. The operating instructions form part of the guarantee. The Guarantee is void if other parts are used than genuine Kränzle accessory parts or genuine Kränzle spare parts.

For high-pressure cleaners sold to the user the guarantee period is 24 month.

For high-pressure cleaners sold for industrial use the guarantee period is 12 month. In the case of a guarantee please contact your dealer or authorized seller delivering accessories and your purchase receipt. You can find them in the internet under www.kraenzle.com.

The guarantee is also void if the machine is used with exceeding the temperature and speed limits, a voltage below the required rating, with less than the required amount of water or with dirty water. Pressure gauge, nozzle, valves, sleeves, high pressure hose and spray equipment are wear parts and are not covered by the warranty.


M2000 - Gun

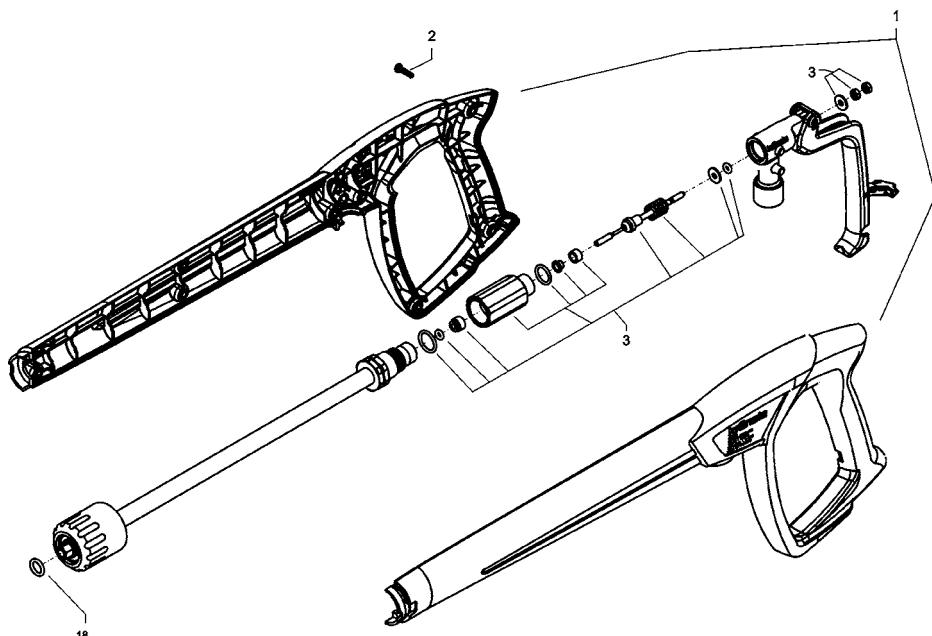

Spare parts list Profi-Jet B 13/150
M2000-Gun

| No. | Description | Qty. | Ord.-No. |
|----------------------|----------------------|------|---------------|
| 1 | Pistolenschale re+li | 1 | 12.450 |
| 2 | Schraube 3,5 x 14 | 10 | 44.525 |
| 3 | Reparatursatz M2000 | | 12.454 |
| 18 | O-Ring 9,3 x 2,4 | 1 | 13.273 |
| Pistole M2000 | | | 12.480 |

Dirtkiller

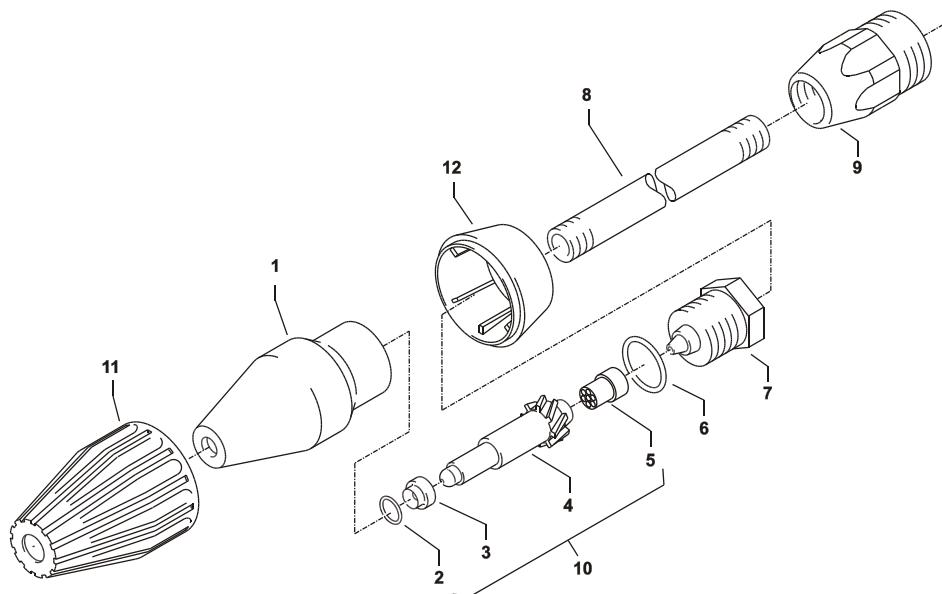

Spare parts list Profi-Jet B 10/200; B 13/150
Dirtkiller

| No. | Description | Qty. | Ord.-No. |
|--|---|------|-------------------|
| 1 | Sprühkörper | 1 | 41.520 |
| 2 | O-Ring 6,88 x 1,68 | 1 | 41.521 |
| 3 | Düsensitz | 1 | 41.522 |
| 4 | Düse 03 (B 10/200) | 1 | 41.523 4 |
| 4.1 | Düse 042 (B 13/150) | 1 | 41.523 |
| 5 | Stabilisator | 1 | 41.524 |
| 6 | O-Ring | 1 | 40.016 1 |
| 7 | Sprühstopfen | 1 | 41.526 |
| 8 | Rohr 500 mm 2x M 12 x 1 | 1 | 41.527 1 |
| 9 | ST 30-Nippel M 22 x 1,5 / M 12 x 1 ISK | 1 | 13.363 |
| 11 | Kappe vorn für Schmutzkiller | 1 | 41.528 1 |
| 12 | Kappe hinten für Schmutzkiller 03 (B 10/200) | 1 | 41.542 1 |
| 12.1 | Kappe hinten für Schmutzkiller 042 (B 13/150) | 1 | 41.540 2 |
| 10 | Rep.-Satz Schmutzkiller 03 | | 41.096 1 |
| | bestehend aus je 1x 2; 3; 4; 5 | | |
| 10.1 | Rep.-Satz Schmutzkiller 042 | | 41.097 |
| | bestehend aus je 1x 2; 3; 4; 5 | | |
| Dirtkiller 03 with Lance (B10/200) | | | 41.570-03 |
| Dirtkiller 042 with Lance (B13/150) | | | 41.570-042 |

Inspirection report

for KRÄNZLE - High Pressure Cleaners

Regular inspection every 12 months if used professionally!

Appliance No:



Type:



The following must be checked:


 


 


 

1. Safety features

- a) Manometer
- b) Safety valve (pressure control)
- c) Operating pressure
- d) Cut out pressure (max. 10% above operating pressure)
- e) Low pressure with trigger released

2. General condition

- a) High pressure hose
- b) Spray gun
- c) Motor
- d) Oil level

The information in the operating instructions are a part of the inspection
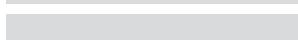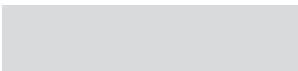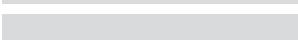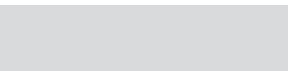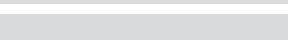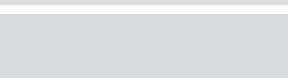
| Result of inspection: | Date of inspection: | Faults rectified, Stamp and signature |
|---|---|---|
|     |     |     |


Excerpt from the Guidelines for Liquid Spray Equipment (ZH 1/46) by the Central Office of the Professional Trade Association.

Inspection:

Liquid spray equipment should be inspected for safe operation by a qualified person whenever necessary, but no less than every 12 months. The maker's or supplier's instructions must be followed. The inspection intervals may be extended if the equipment is not in active use.

In Germany, inspections compliant with the (German) Emission Controls Act may be required for oil and gas-fired equipment, and the owner must arrange for these to be carried out independently of the main inspection.

The results of inspections must be recorded in writing and presented to the respective authorities on demand. There is no set form for these records.

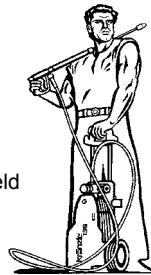

EC declaration of conformity

We hereby declare,
that the high-pressure models:

**Kräntzle B 10/200; B 13/150
Kräntzle B 16/220; B 16/250**

Nominal flow

B 10/200: 600 l/h

B 13/150: 780 l/h

B 16/220: B 16/250: 960 l/h

(techn. documentation available from):

Manfred Bauer, Fa. Josef Kränzle
Rudolf-Diesel-Str. 20, 89257 Illertissen

comply with the following guidelines and specifications and their amendments for high-pressure cleaners:

**Machine guideline 2006/42/EEC
Specification for electromagnetic
compatibility 2004/108/EEC
Outdoor noise directive 2005/88/EC,
Art. 13, High-pressure water jet machines
Appendix 3, part B, chapter 27**

Sound power level measured:
guaranteed:

100 dB (A)
103 dB (A)

Applied conformity evaluation procedures

annex V. noise directive 2005/88/EC

Applied specifications and standards:

**EN 60 335-2-79 :2009
EN 55 014-1 :2006
EN 61 000-3-2 :2006
EN 61 000-3-3 :2008**

Bielefeld, den 09.03.2012

Cecile José

Kräntzle Josef
(Managing Director)

Kräntze - world-wide:
Technical perfection, top design.

kränzle®



w w w . k r ä n z l e . c o m

I. Kränzle GmbH
Elpe 97
D - 33605 Bielefeld

Reprint only allowed with the authorisation of Kränzle.

As date of 04.18.2013

Subject to technical modifications. Order no. 30.212.1